

Installation Instructions - Hero Recessed Trim

Models HNR-TM

Please read all instructions prior to installation and keep for future reference!

1. PRODUCT TO BE INSTALLED BY A QUALIFIED ELECTRICIAN.
2. SUITABLE FOR DAMP LOCATIONS.
3. MIN 90°C SUPPLY CONDUCTORS.
4. DO NOT INSTALL INSULATION WITHIN 76 MM (3 IN) OF ANY PART OF THE LUMINAIRE.
5. BLINKING LIGHT OF THIS THERMALLY PROTECTED LUMINAIRE MAY INDICATE OVERHEATING.
6. NEVER ATTEMPT ANY WORK WITHOUT SHUTTING OFF ELECTRICITY AT MAIN FUSE BOX OR BREAKER PANEL.
7. FIXTURE SAFETY WIRE MUST BE INSTALLED PRIOR TO INSERTING FIXTURE INTO APERTURE.






REVO.1
08042026

1 / 5

glint
by luminii
7777 Merrimac Ave
Niles, IL 60714
T 224.333.6033
F 224.757.7557
info@luminii.com
www.luminii.com

Please read all instructions prior to installation and keep for future reference!

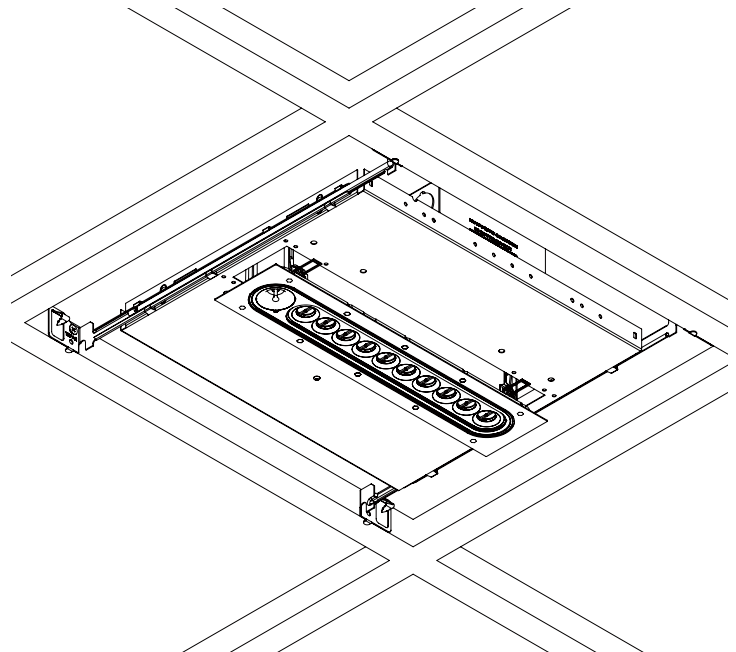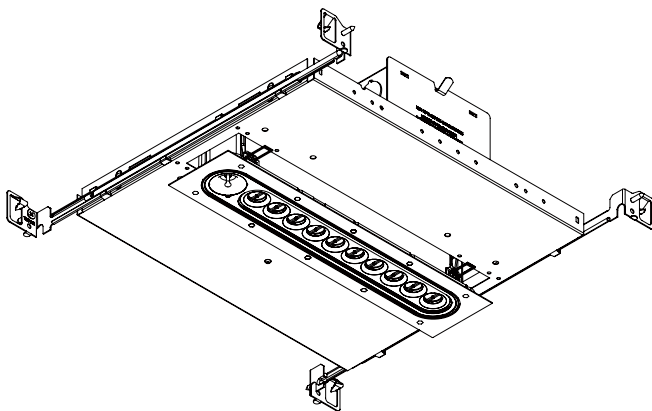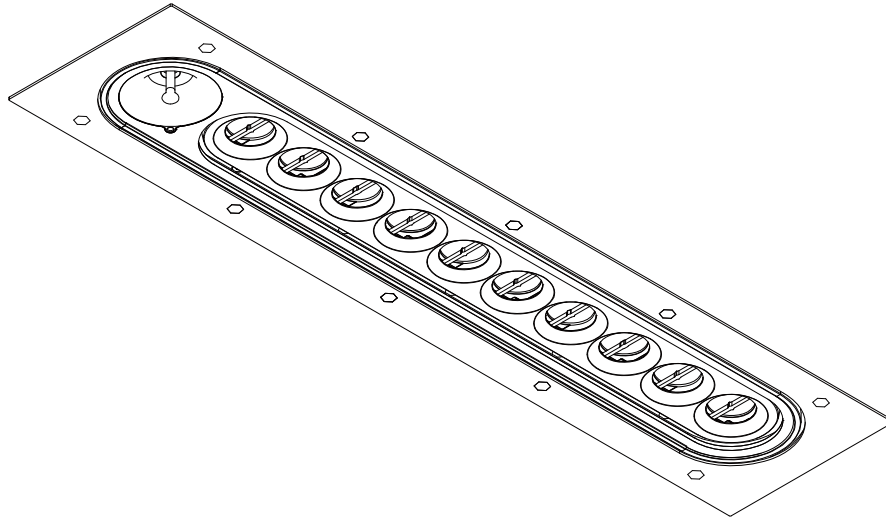

Installation Instructions - Hero Recessed Trim

Models HNR-TM

Please read all instructions prior to installation and keep for future reference!

1. PRODUCT TO BE INSTALLED BY A QUALIFIED ELECTRICIAN.
2. SUITABLE FOR DAMP LOCATIONS.
3. MIN 90°C SUPPLY CONDUCTORS.
4. DO NOT INSTALL INSULATION WITHIN 76 MM (3 IN) OF ANY PART OF THE LUMINAIRE.
5. BLINKING LIGHT OF THIS THERMALLY PROTECTED LUMINAIRE MAY INDICATE OVERHEATING.
6. NEVER ATTEMPT ANY WORK WITHOUT SHUTTING OFF ELECTRICITY AT MAIN FUSE BOX OR BREAKER PANEL.
7. FIXTURE SAFETY WIRE MUST BE INSTALLED PRIOR TO INSERTING FIXTURE INTO APERTURE.




REVO.1
08042026

2 / 5

glint
by luminii
7777 Merrimac Ave
Niles, IL 60714
T 224.333.6033
F 224.757.7557
info@luminii.com
www.luminii.com

Exploded View

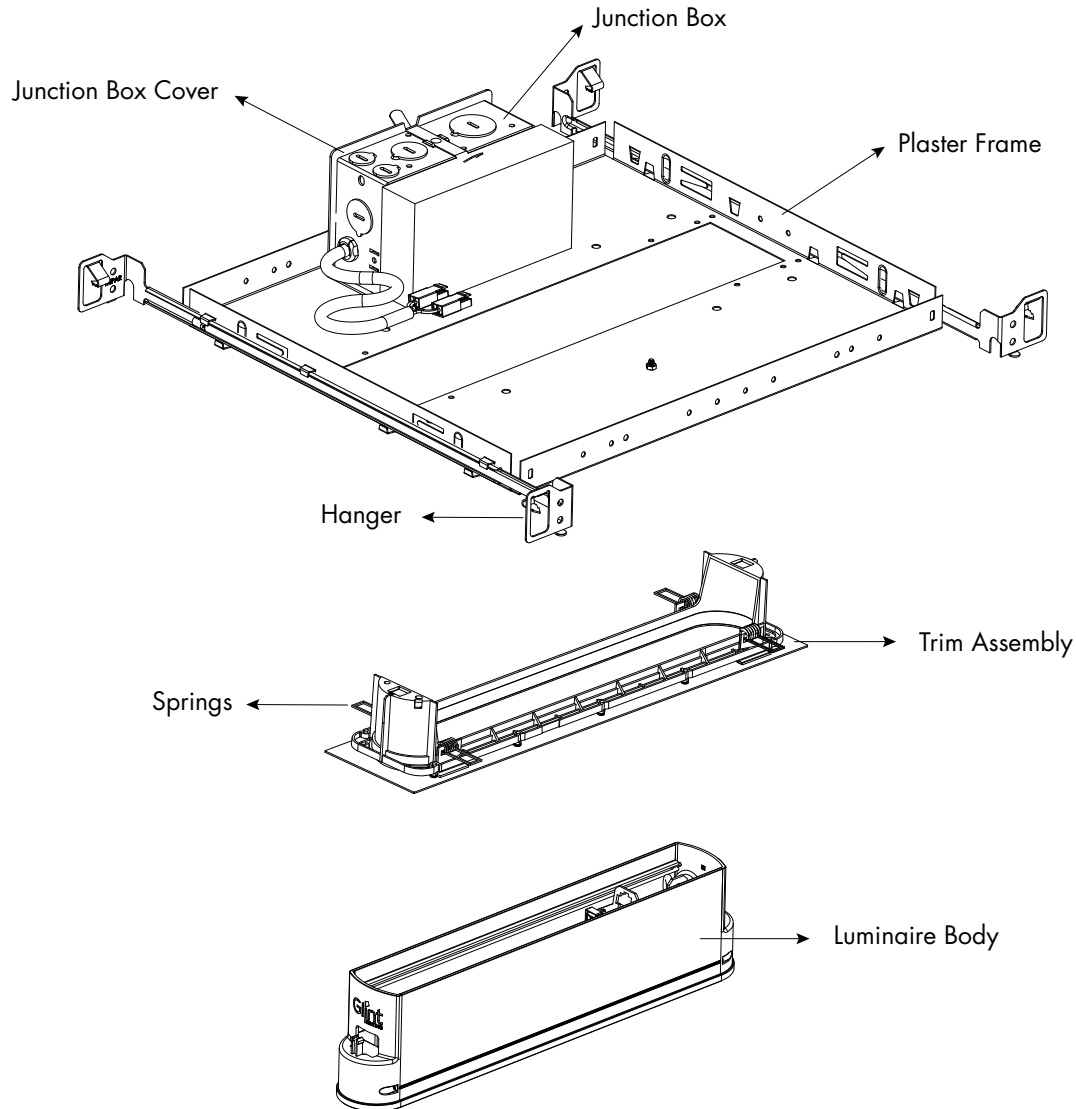

Installation Instructions - Hero Recessed Trim

Models HNR-TM

Please read all instructions prior to installation and keep for future reference!


1. PRODUCT TO BE INSTALLED BY A QUALIFIED ELECTRICIAN.
2. SUITABLE FOR DAMP LOCATIONS.
3. MIN 90°C SUPPLY CONDUCTORS.
4. DO NOT INSTALL INSULATION WITHIN 76 MM (3 IN) OF ANY PART OF THE LUMINAIRE.
5. BLINKING LIGHT OF THIS THERMALLY PROTECTED LUMINAIRE MAY INDICATE OVERHEATING.
6. NEVER ATTEMPT ANY WORK WITHOUT SHUTTING OFF ELECTRICITY AT MAIN FUSE BOX OR BREAKER PANEL.
7. FIXTURE SAFETY WIRE MUST BE INSTALLED PRIOR TO INSERTING FIXTURE INTO APERTURE.




REVO.1
08042026

3 / 5

glint
by luminii
7777 Merrimac Ave
Niles, IL 60714
T 224.333.6033
F 224.757.7557
info@luminii.com
www.luminii.com

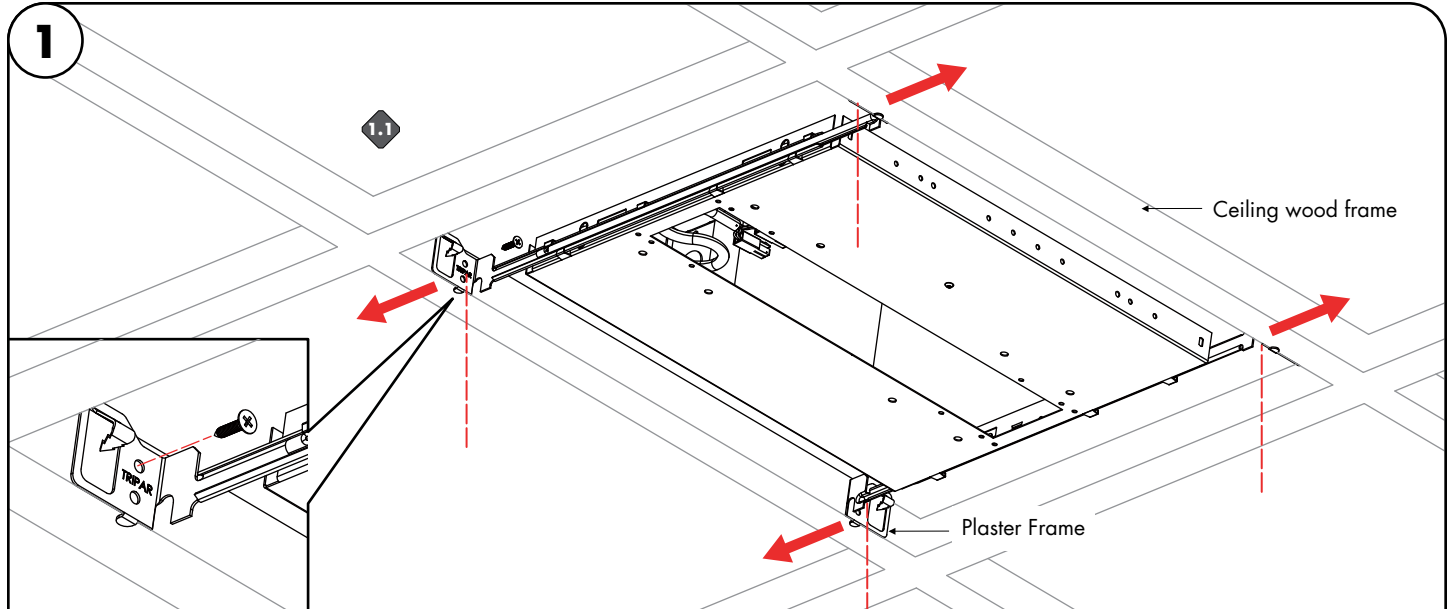

1.1 Fix plaster frame to joists or other secure ceiling material using provided hanger bars and mounting screws (provided by others).

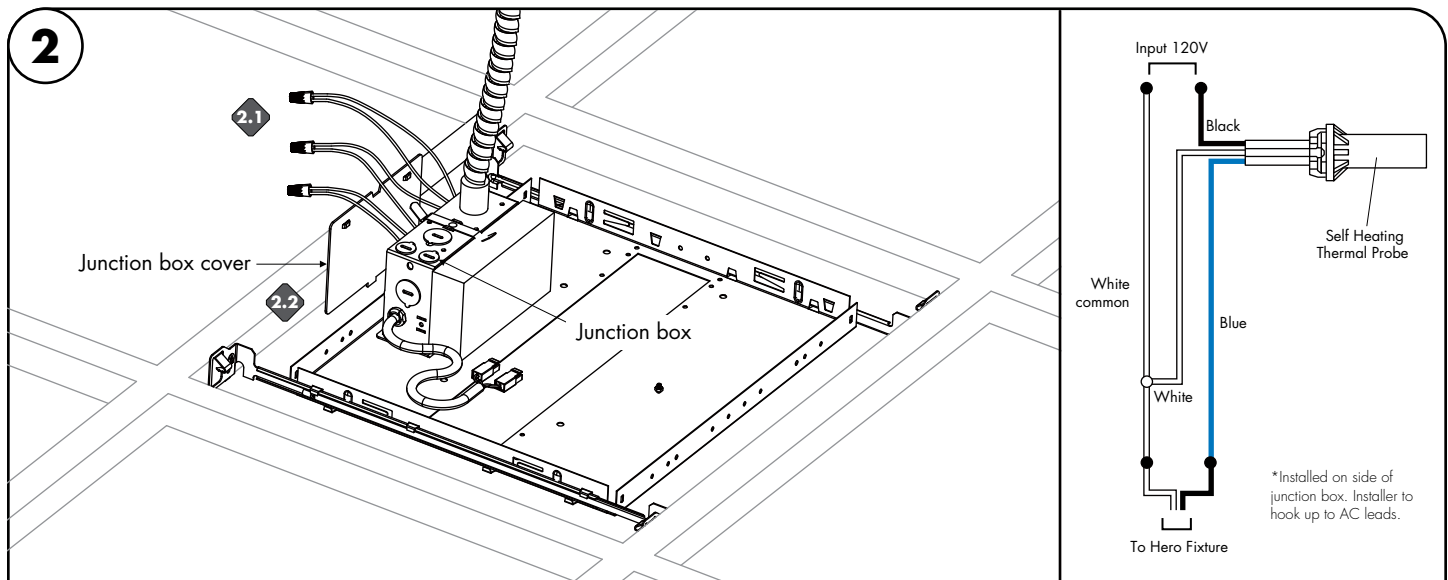

2.1 Integral driver fixture wiring only. Route power and dimming feeds through the knockouts in the junction box compartment (conduit by others). Install self heating thermal probe. Remove the cover to access the interior of the junction box. Complete the required connections following the wiring instructions, then securely reinstall the junction box cover. Ensure all connections comply with the National Electrical Code (NEC) and any applicable local regulations.

Installation Instructions - Hero Recessed Trim

Models HNR-TM







glint
by luminii
7777 Merrimac Ave
Niles, IL 60714
T 224.333.6033
F 224.757.7557
info@luminii.com
www.luminii.com

REVO.1
08042026

4 / 5

Please read all instructions prior to installation and keep for future reference!

1. PRODUCT TO BE INSTALLED BY A QUALIFIED ELECTRICIAN.
2. SUITABLE FOR DAMP LOCATIONS.
3. MIN 90°C SUPPLY CONDUCTORS.
4. DO NOT INSTALL INSULATION WITHIN 76 MM (3 IN) OF ANY PART OF THE LUMINAIRE.
5. BLINKING LIGHT OF THIS THERMALLY PROTECTED LUMINAIRE MAY INDICATE OVERHEATING.
6. NEVER ATTEMPT ANY WORK WITHOUT SHUTTING OFF ELECTRICITY AT MAIN FUSE BOX OR BREAKER PANEL.
7. FIXTURE SAFETY WIRE MUST BE INSTALLED PRIOR TO INSERTING FIXTURE INTO APERTURE.

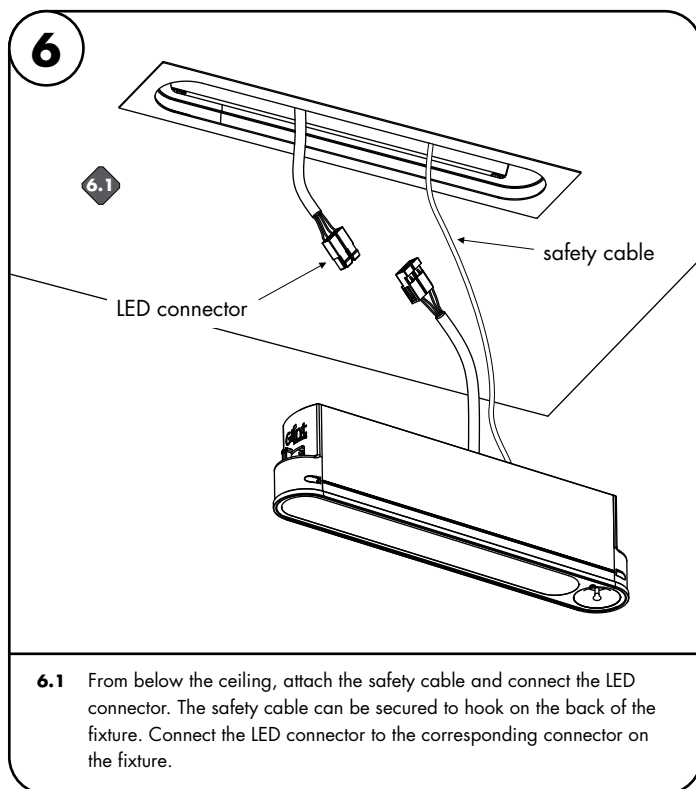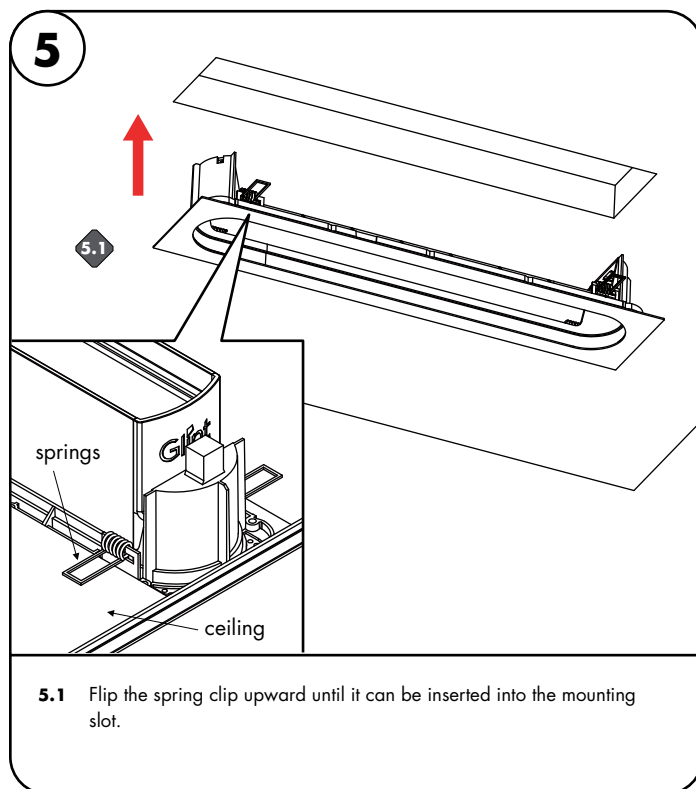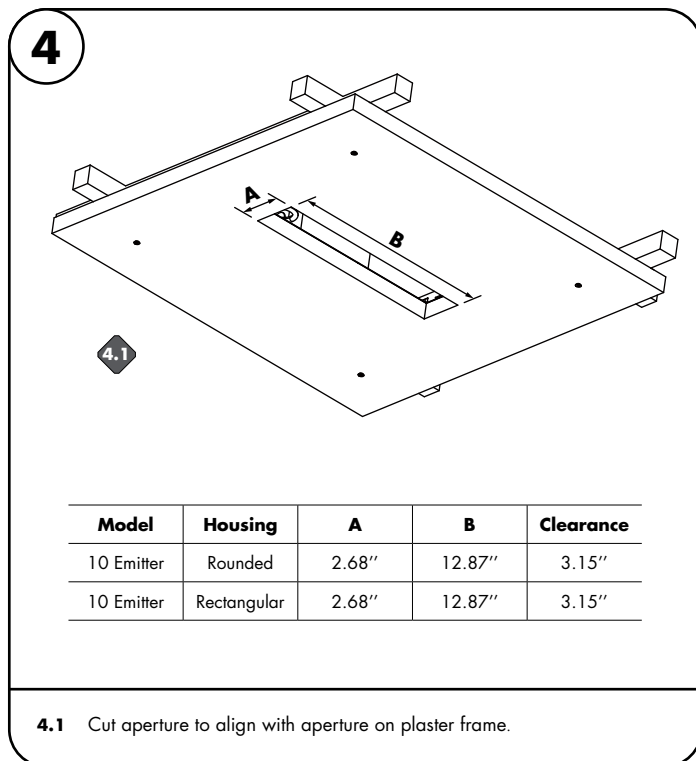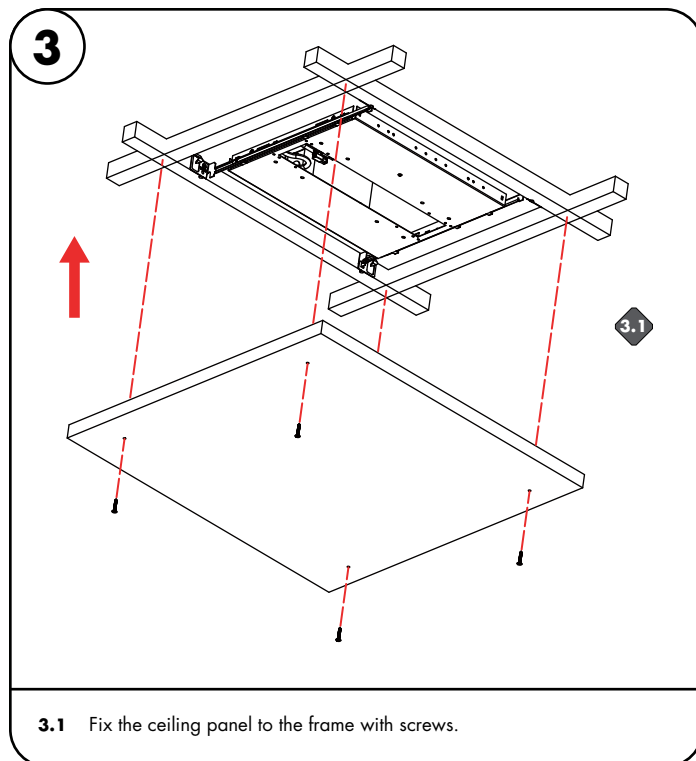

Installation Instructions - Hero Recessed Trim

Models HNR-TM

Please read all instructions prior to installation and keep for future reference!


1. PRODUCT TO BE INSTALLED BY A QUALIFIED ELECTRICIAN.
2. SUITABLE FOR DAMP LOCATIONS.
3. MIN 90°C SUPPLY CONDUCTORS.
4. DO NOT INSTALL INSULATION WITHIN 76 MM (3 IN) OF ANY PART OF THE LUMINAIRE.
5. BLINKING LIGHT OF THIS THERMALLY PROTECTED LUMINAIRE MAY INDICATE OVERHEATING.
6. NEVER ATTEMPT ANY WORK WITHOUT SHUTTING OFF ELECTRICITY AT MAIN FUSE BOX OR BREAKER PANEL.
7. FIXTURE SAFETY WIRE MUST BE INSTALLED PRIOR TO INSERTING FIXTURE INTO APERTURE.




REVO.1
08042026

5 / 5


glint
by luminii
7777 Merrimac Ave
Niles, IL 60714
T 224.333.6033
F 224.757.7557
info@luminii.com
www.luminii.com

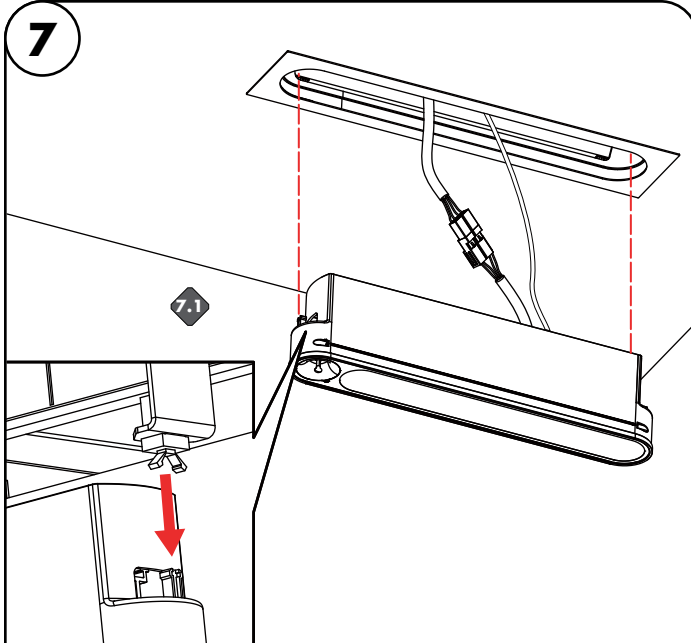

- 7.1** While working below the ceiling, push the fixture up into the housing until the mounting bracket engages with the spring catches. Make sure the safety cable and electrical harness do not obstruct the engagement. Ensure that both sides of the latches at the endcaps are fully secured. To remove fixture, press up again to release the spring catch.

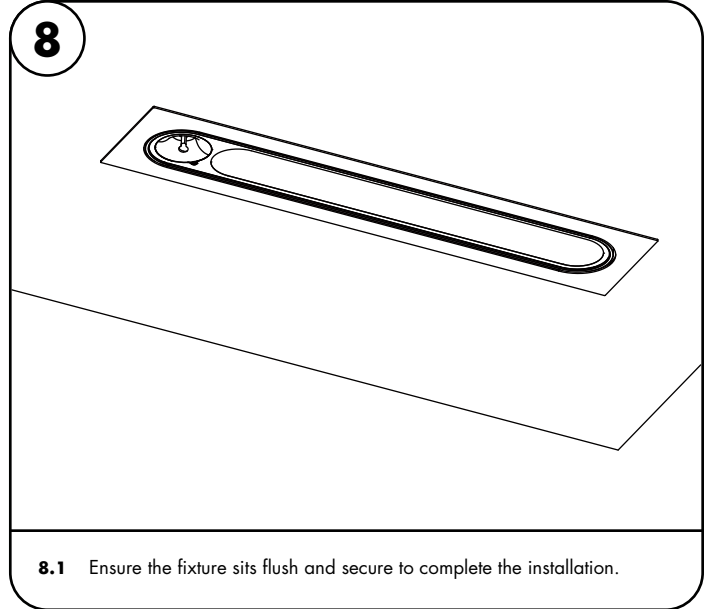

- 8.1** Ensure the fixture sits flush and secure to complete the installation.

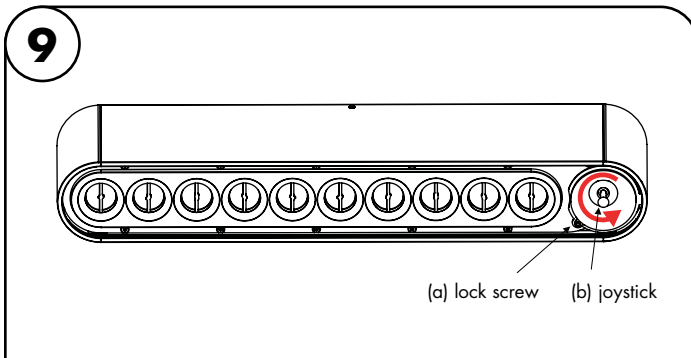

- 9.1** Hero is powered by innovative Light Shift technology, where the direction of its light beam is adjusted by the joystick on the front face. The adjustment is locked by a single, recessed lock screw.

Turn the recessed (a) lock screw counter-clockwise with a 1.5 mm hex key to unlock the joystick.

Adjust beam direction by moving the (b) joystick in the desired direction. The joystick should move smoothly with light resistance, loosen lock screw further if it is hard to move.

Tighten the lock screw to finger tightness, it is not necessary to overtighten.