

Installation Instructions - Hero Recessed Trimless

Models HNR TL

Please read all instructions prior to installation and keep for future reference!

1. PRODUCT TO BE INSTALLED BY A QUALIFIED ELECTRICIAN.
2. SUITABLE FOR DAMP LOCATIONS.
3. MIN 90°C SUPPLY CONDUCTORS.
4. DO NOT INSTALL INSULATION WITHIN 76 MM (3 IN) OF ANY PART OF THE LUMINAIRE.
5. BLINKING LIGHT OF THIS THERMALLY PROTECTED LUMINAIRE MAY INDICATE OVERHEATING.
6. NEVER ATTEMPT ANY WORK WITHOUT SHUTTING OFF ELECTRICITY AT MAIN FUSE BOX OR BREAKER PANEL.
7. FIXTURE SAFETY WIRE MUST BE INSTALLED PRIOR TO INSERTING FIXTURE INTO APERTURE.






REVO.1
08042026

1 / 5

glint
by luminii
7777 Merrimac Ave
Niles, IL 60714
T 224.333.6033
F 224.757.7557
info@luminii.com
www.luminii.com

Please read all instructions prior to installation and keep for future reference!

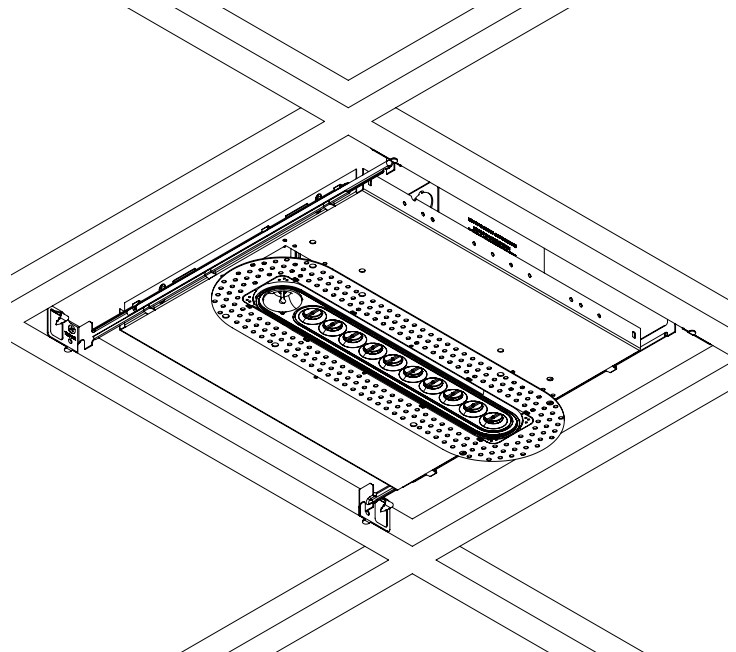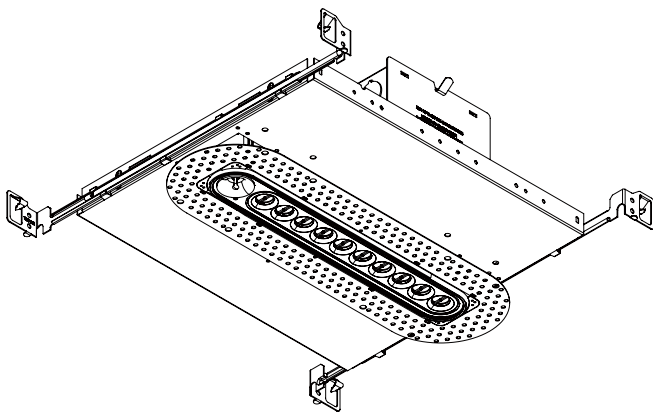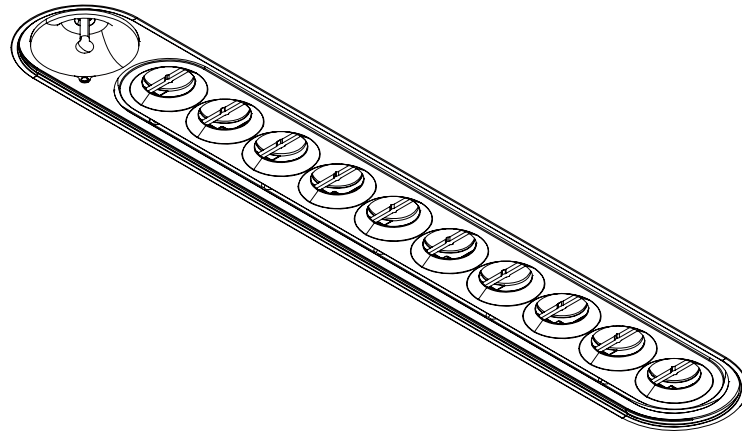

Installation Instructions - Hero Recessed Trimless

Models HNR TL

Please read all instructions prior to installation and keep for future reference!

1. PRODUCT TO BE INSTALLED BY A QUALIFIED ELECTRICIAN.
2. SUITABLE FOR DAMP LOCATIONS.
3. MIN 90°C SUPPLY CONDUCTORS.
4. DO NOT INSTALL INSULATION WITHIN 76 MM (3 IN) OF ANY PART OF THE LUMINAIRE.
5. BLINKING LIGHT OF THIS THERMALLY PROTECTED LUMINAIRE MAY INDICATE OVERHEATING.
6. NEVER ATTEMPT ANY WORK WITHOUT SHUTTING OFF ELECTRICITY AT MAIN FUSE BOX OR BREAKER PANEL.
7. FIXTURE SAFETY WIRE MUST BE INSTALLED PRIOR TO INSERTING FIXTURE INTO APERTURE.




REVO.1
08042026

2 / 5

glint
by luminii
7777 Merrimac Ave
Niles, IL 60714
T 224.333.6033
F 224.757.7557
info@luminii.com
www.luminii.com

Exploded View

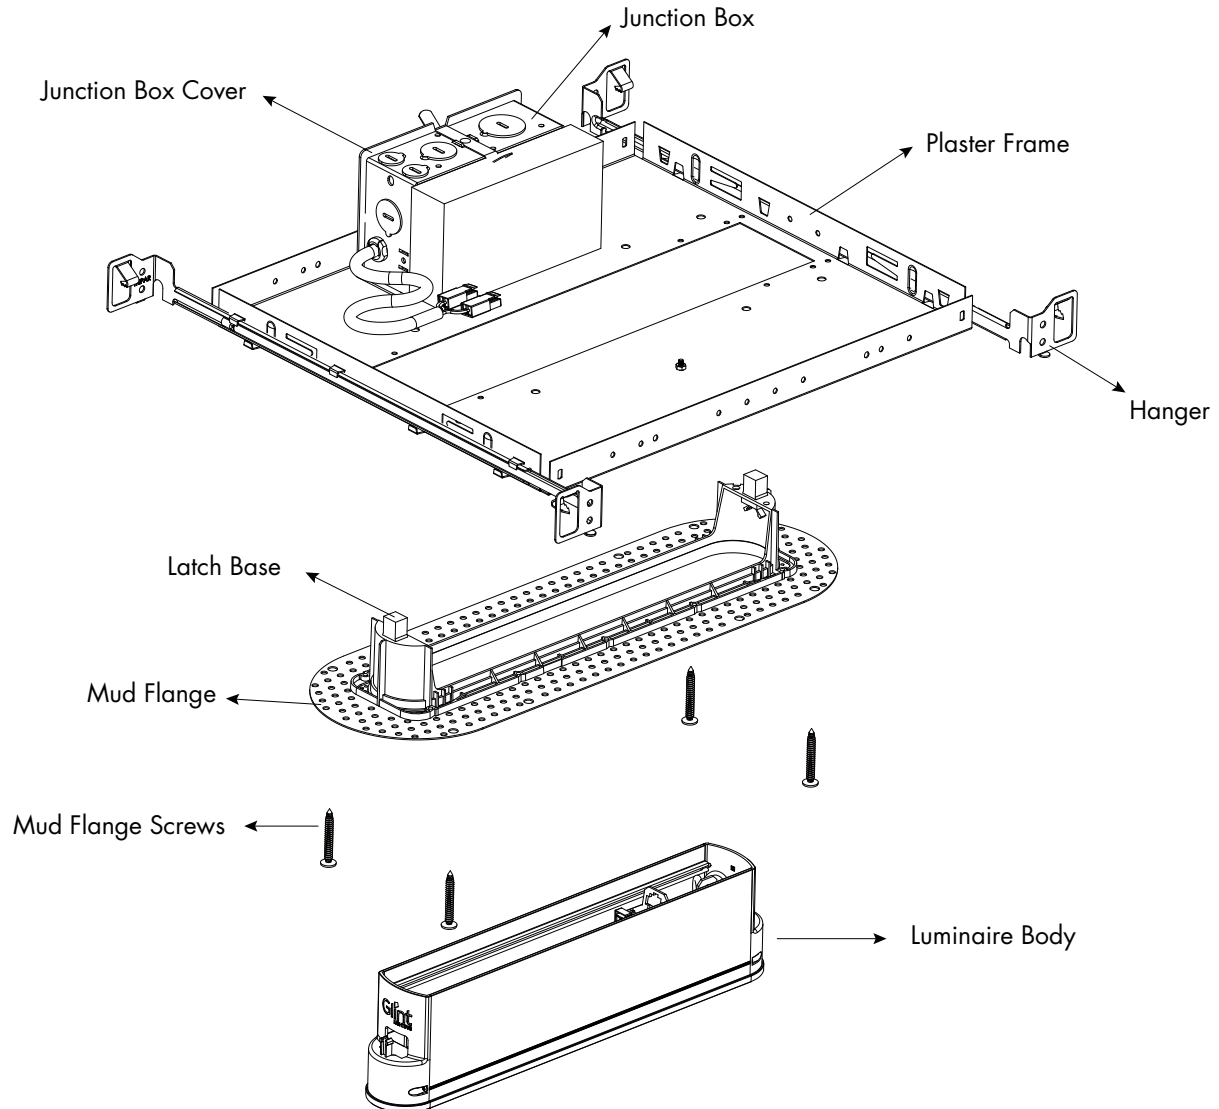

Installation Instructions - Hero Recessed Trimless

Models HNR TL

Please read all instructions prior to installation and keep for future reference!


1. PRODUCT TO BE INSTALLED BY A QUALIFIED ELECTRICIAN.
2. SUITABLE FOR DAMP LOCATIONS.
3. MIN 90°C SUPPLY CONDUCTORS.
4. DO NOT INSTALL INSULATION WITHIN 76 MM (3 IN) OF ANY PART OF THE LUMINAIRE.
5. BLINKING LIGHT OF THIS THERMALLY PROTECTED LUMINAIRE MAY INDICATE OVERHEATING.
6. NEVER ATTEMPT ANY WORK WITHOUT SHUTTING OFF ELECTRICITY AT MAIN FUSE BOX OR BREAKER PANEL.
7. FIXTURE SAFETY WIRE MUST BE INSTALLED PRIOR TO INSERTING FIXTURE INTO APERTURE.




REVO.1
08042026

3 / 5

glint
by luminii
7777 Merrimac Ave
Niles, IL 60714
T 224.333.6033
F 224.757.7557
info@luminii.com
www.luminii.com

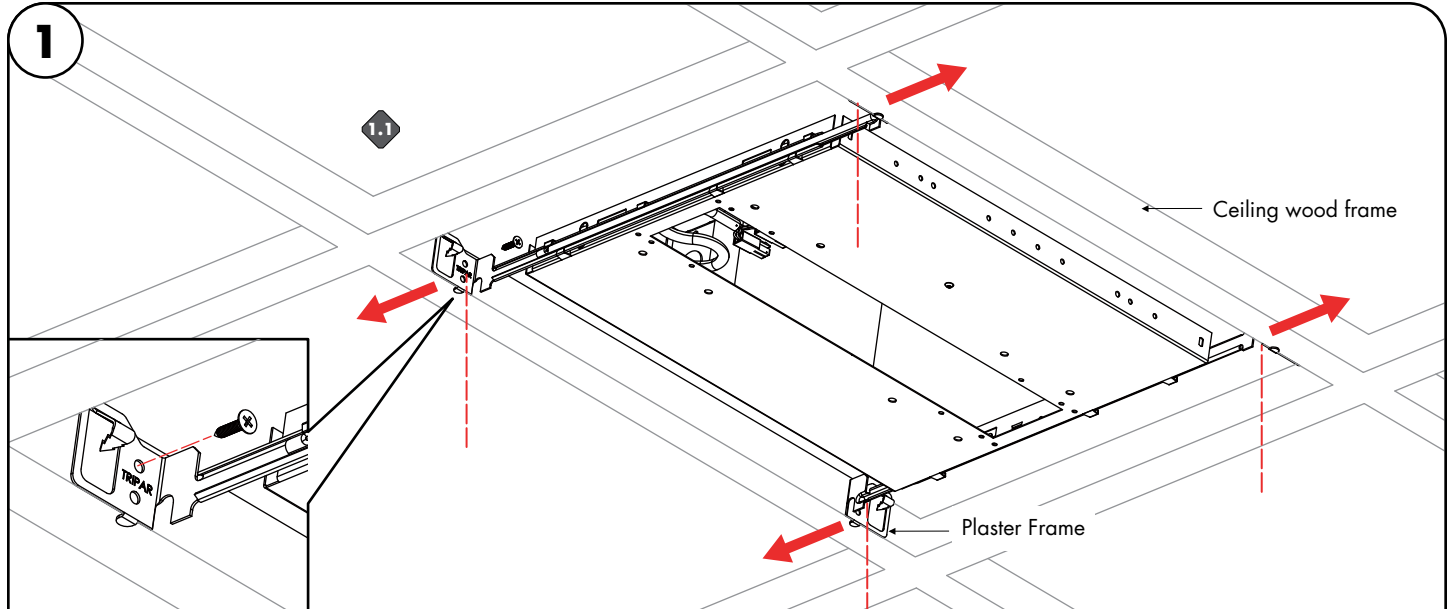

1.1 Fix plaster frame to joists or other secure ceiling material using provided hanger bars and mounting screws (provided by others).

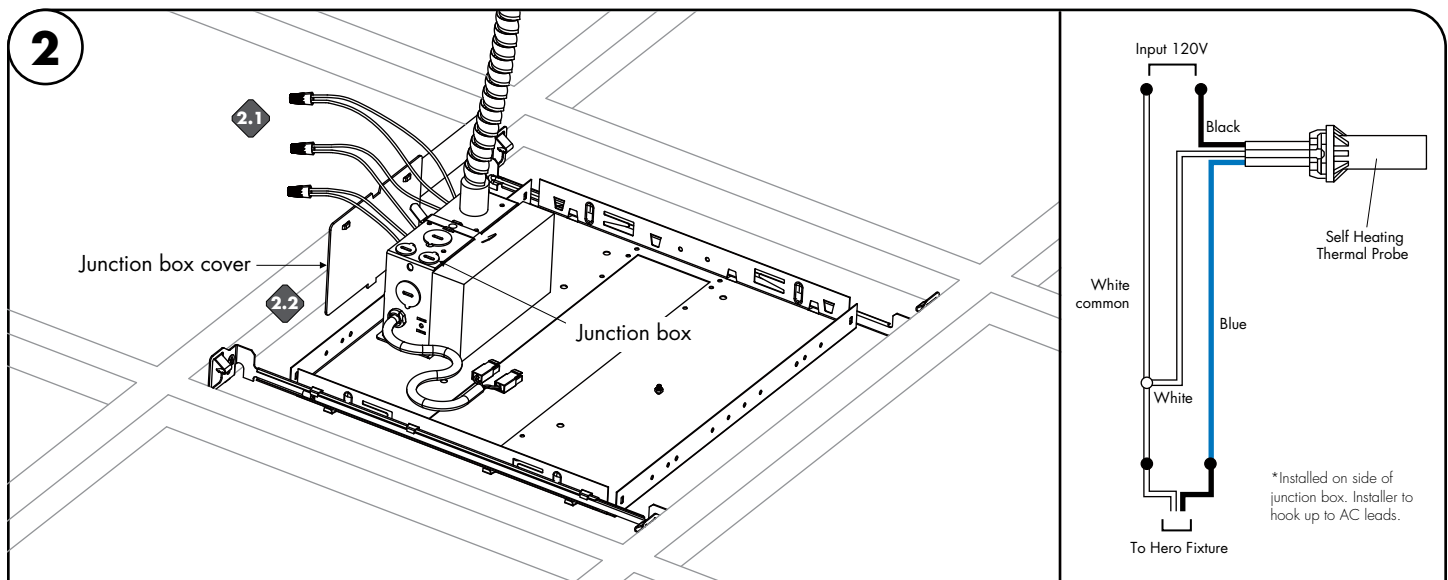

2.1 Integral driver fixture wiring only. Route power and dimming feeds through the knockouts in the junction box compartment (conduit by others). Install self heating thermal probe. Remove the cover to access the interior of the junction box. Complete the required connections following the wiring instructions, then securely reinstall the junction box cover. Ensure all connections comply with the National Electrical Code (NEC) and any applicable local regulations.

Installation Instructions - Hero Recessed Trimless

Models HNR TL







glint
by luminii
7777 Merrimac Ave
Niles, IL 60714
T 224.333.6033
F 224.757.7557
info@luminii.com
www.luminii.com

REVO.1
08042026

4 / 5

Please read all instructions prior to installation and keep for future reference!

1. PRODUCT TO BE INSTALLED BY A QUALIFIED ELECTRICIAN.
2. SUITABLE FOR DAMP LOCATIONS.
3. MIN 90°C SUPPLY CONDUCTORS.
4. DO NOT INSTALL INSULATION WITHIN 76 MM (3 IN) OF ANY PART OF THE LUMINAIRE.
5. BLINKING LIGHT OF THIS THERMALLY PROTECTED LUMINAIRE MAY INDICATE OVERHEATING.
6. NEVER ATTEMPT ANY WORK WITHOUT SHUTTING OFF ELECTRICITY AT MAIN FUSE BOX OR BREAKER PANEL.
7. FIXTURE SAFETY WIRE MUST BE INSTALLED PRIOR TO INSERTING FIXTURE INTO APERTURE.

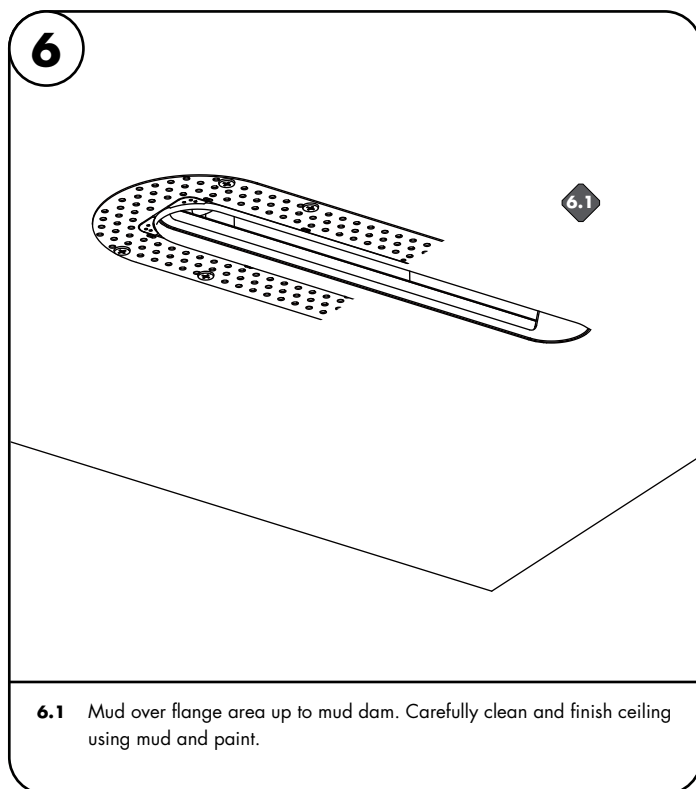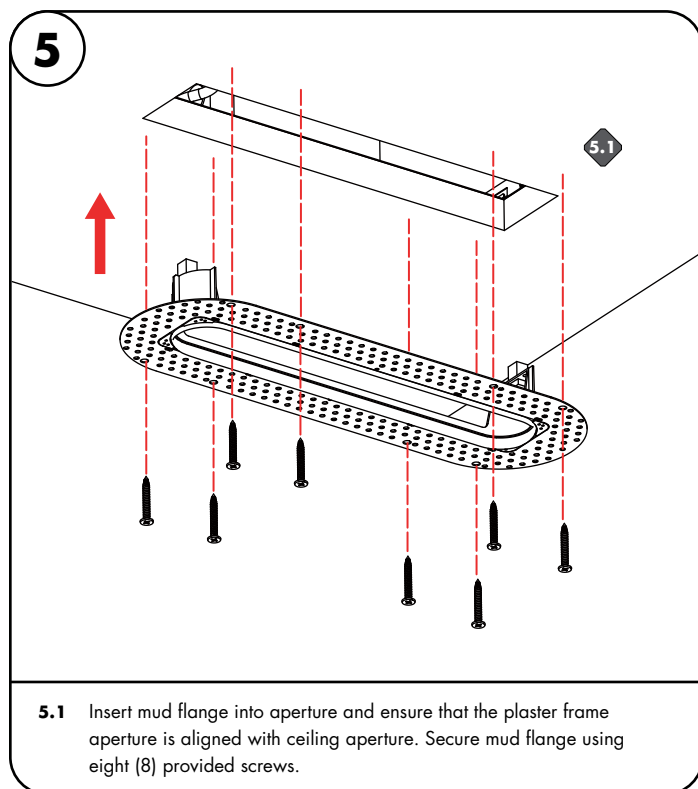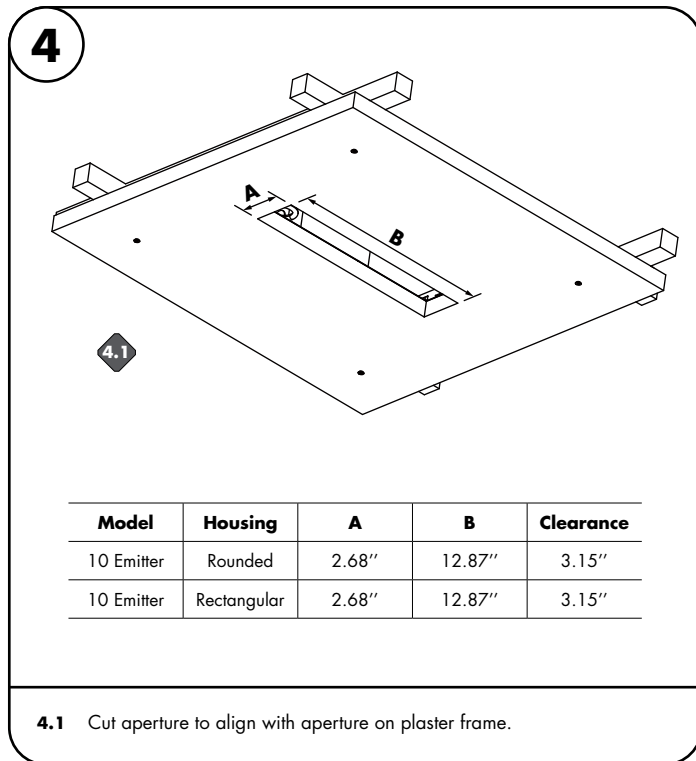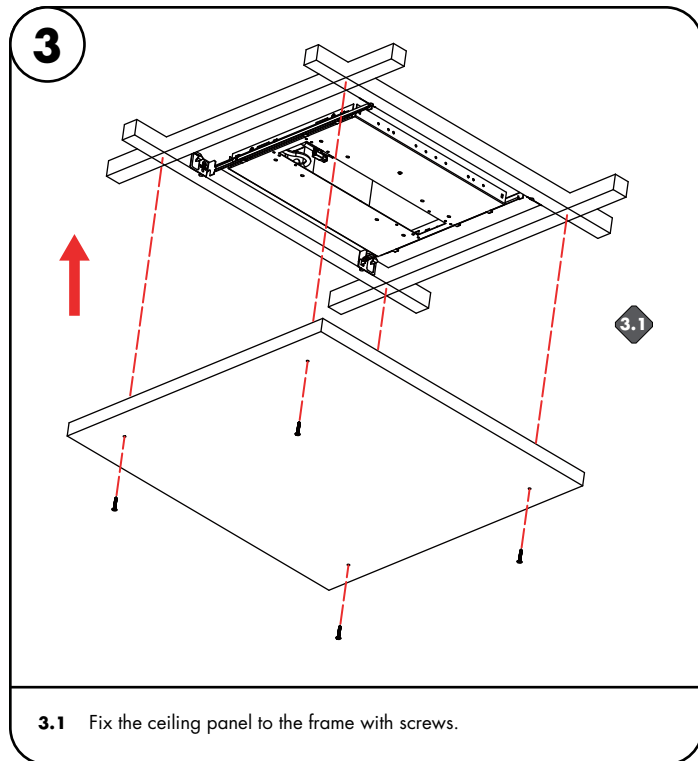

Installation Instructions - Hero Recessed Trimless

Models HNR TL

Please read all instructions prior to installation and keep for future reference!

1. PRODUCT TO BE INSTALLED BY A QUALIFIED ELECTRICIAN.
2. SUITABLE FOR DAMP LOCATIONS.
3. MIN 90°C SUPPLY CONDUCTORS.
4. DO NOT INSTALL INSULATION WITHIN 76 MM (3 IN) OF ANY PART OF THE LUMINAIRE.
5. BLINKING LIGHT OF THIS THERMALLY PROTECTED LUMINAIRE MAY INDICATE OVERHEATING.
6. NEVER ATTEMPT ANY WORK WITHOUT SHUTTING OFF ELECTRICITY AT MAIN FUSE BOX OR BREAKER PANEL.
7. FIXTURE SAFETY WIRE MUST BE INSTALLED PRIOR TO INSERTING FIXTURE INTO APERTURE.



REVO.1
08042026

5 / 5

glint
by luminii
7777 Merrimac Ave
Niles, IL 60714
T 224.333.6033
F 224.757.7557
info@luminii.com
www.luminii.com

