

Stenos Square Downlight Installation Instructions

Stenos Square Adjustable Surface Downlights

Please read all instructions prior to installation and keep for future reference!

1. PRODUCT TO BE INSTALLED BY A QUALIFIED ELECTRICIAN
2. SUITABLE FOR DAMP LOCATIONS
3. FOR REMOTE DRIVER FIXTURES, USE ONLY WITH CLASS 2 POWER UNIT




REVO.1
10232025


1 / 6

STENOS[®]
by luminii

7777 Merrimac Ave
Niles, IL 60714
T 224.333.6033
F 224.757.7557
info@luminii.com
www.luminii.com

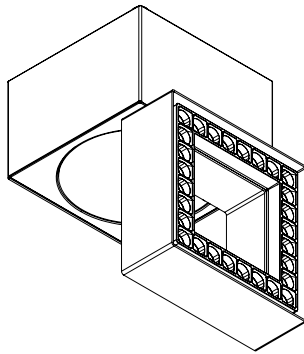

4X4

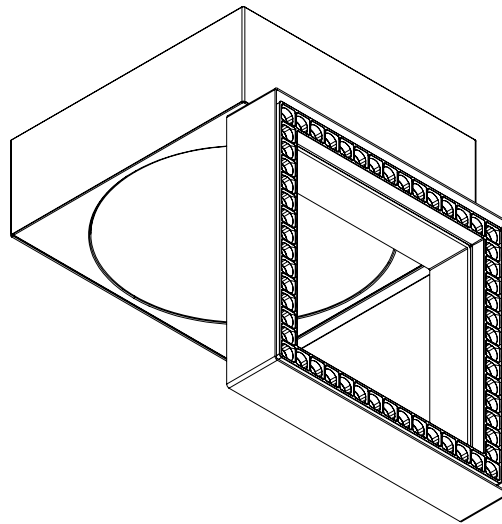

6X6

Stenos Square Downlight Installation Instructions

Stenos Square Adjustable Surface Downlights

Please read all instructions prior to installation and keep for future reference!

1. PRODUCT TO BE INSTALLED BY A QUALIFIED ELECTRICIAN
2. SUITABLE FOR DAMP LOCATIONS
3. FOR REMOTE DRIVER FIXTURES, USE ONLY WITH CLASS 2 POWER UNIT




REVO.1
10232025

2 / 6

STENOS[®]
by luminii

7777 Merrimac Ave
Niles, IL 60714
T 224.333.6033
F 224.757.7557
info@luminii.com
www.luminii.com

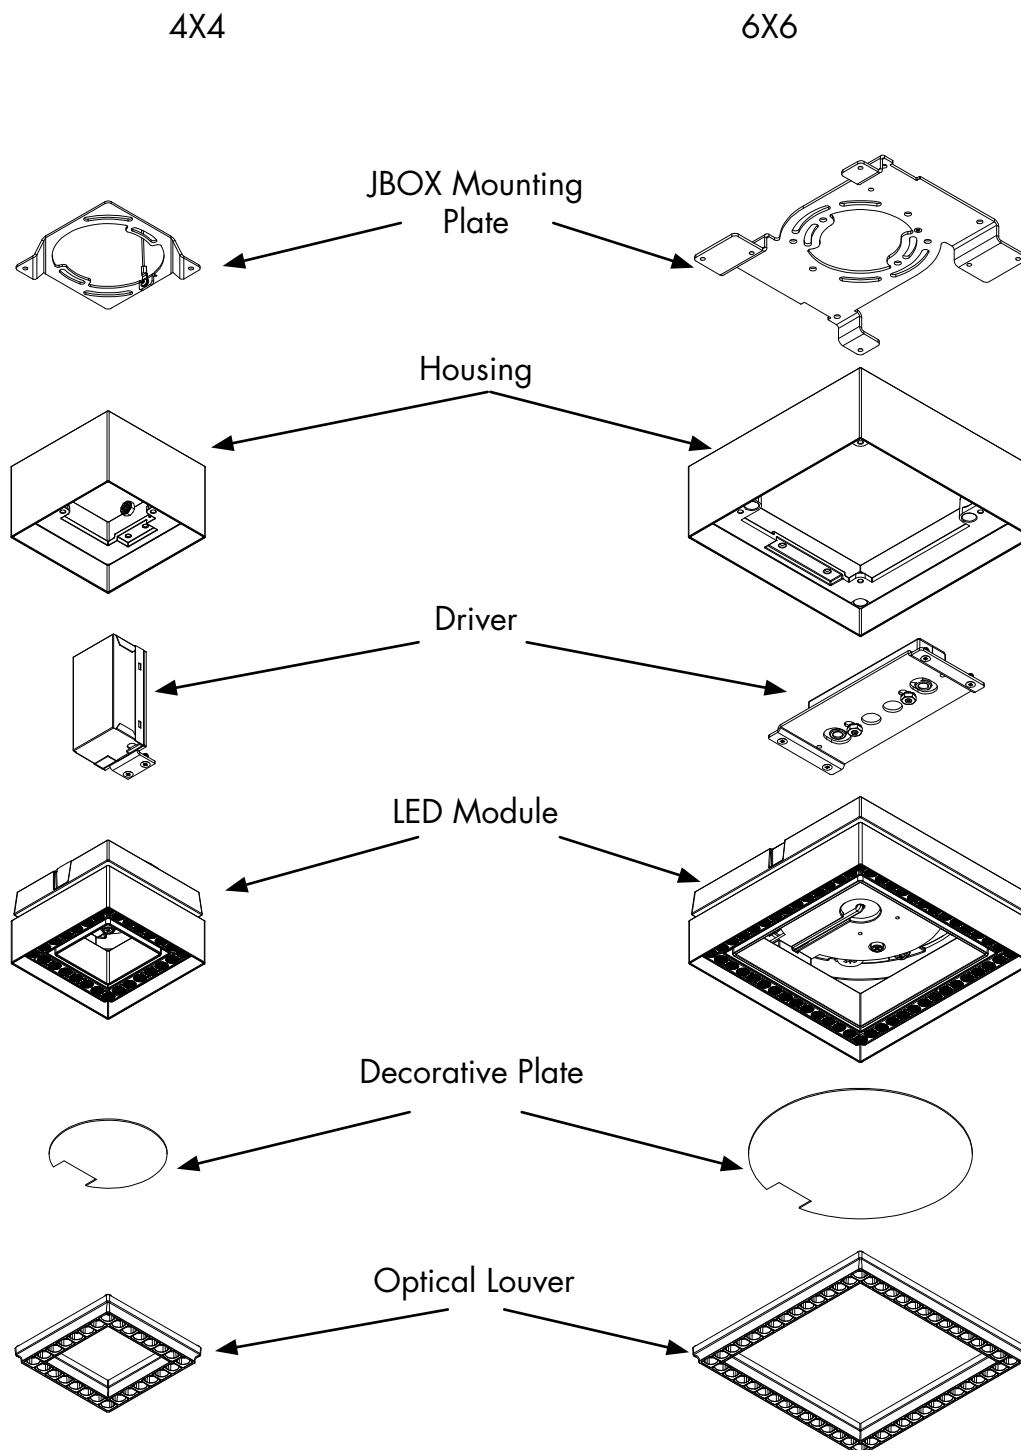

Note: The following install steps will display the 4" version, but 6" version share the same steps.

Stenos Square Downlight Installation Instructions

Stenos Square Adjustable Surface Downlights

Please read all instructions prior to installation and keep for future reference!

1. PRODUCT TO BE INSTALLED BY A QUALIFIED ELECTRICIAN
2. SUITABLE FOR DAMP LOCATIONS
3. FOR REMOTE DRIVER FIXTURES, USE ONLY WITH CLASS 2 POWER UNIT




REVO.1
10232025

3 / 6


STENOS
by luminii

7777 Merrimac Ave
Niles, IL 60714
T 224.333.6033
F 224.757.7557
info@luminii.com
www.luminii.com


4x4 Driver Integral Clearance

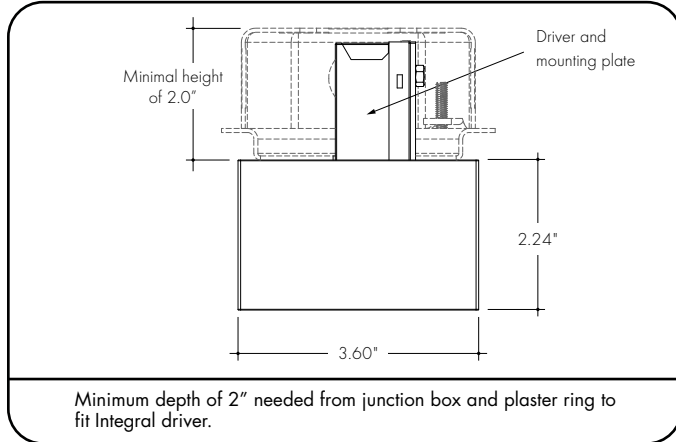

Mounting Bracket Dimensions

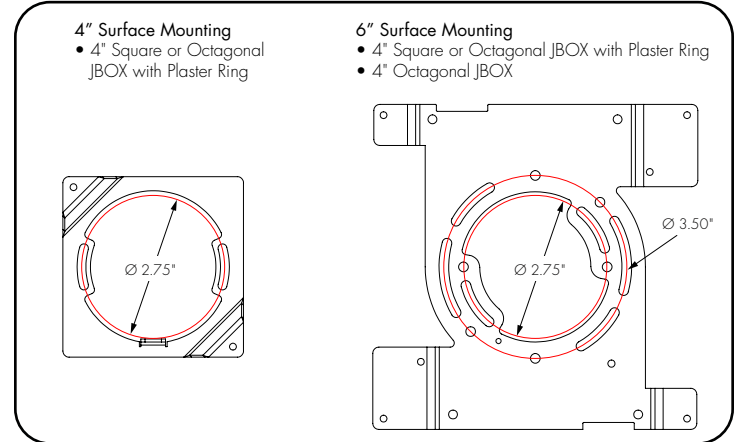

Housing Installation

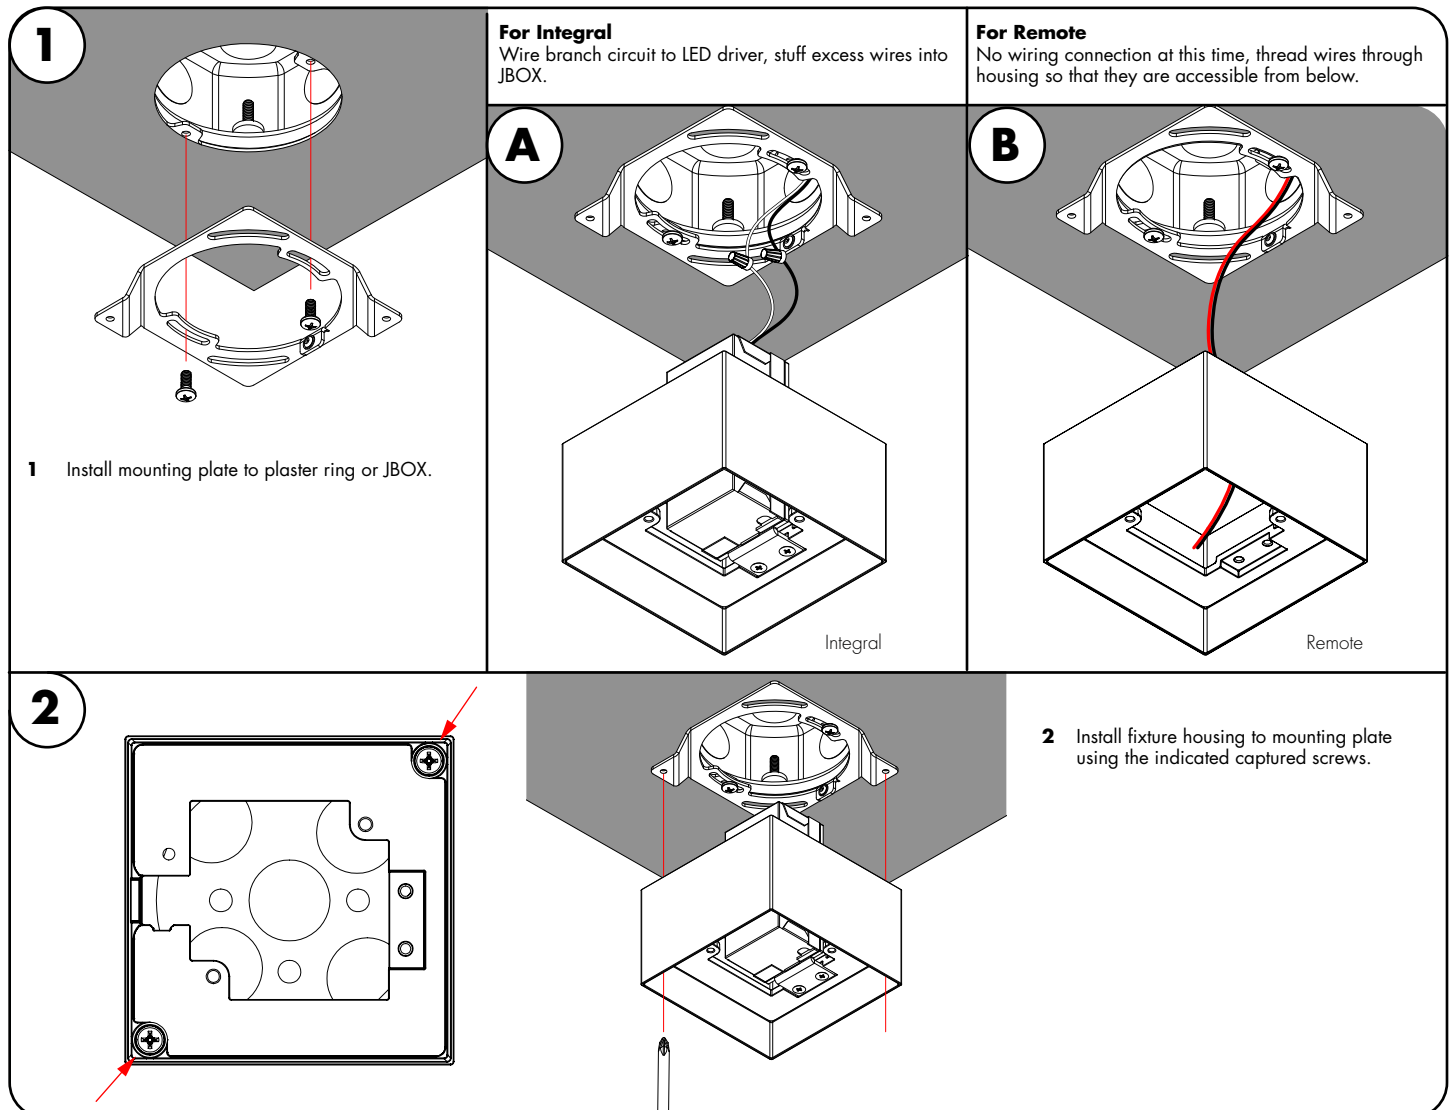

Stenos Square Downlight Installation Instructions

Stenos Square Adjustable Surface Downlights

Please read all instructions prior to installation and keep for future reference!

1. PRODUCT TO BE INSTALLED BY A QUALIFIED ELECTRICIAN
2. SUITABLE FOR DAMP LOCATIONS
3. FOR REMOTE DRIVER FIXTURES, USE ONLY WITH CLASS 2 POWER UNIT




REVO.1
10232025

4 / 6


STENOS
by luminii

7777 Merrimac Ave
Niles, IL 60714
T 224.333.6033
F 224.757.7557
info@luminii.com
www.luminii.com

Wiring Diagrams

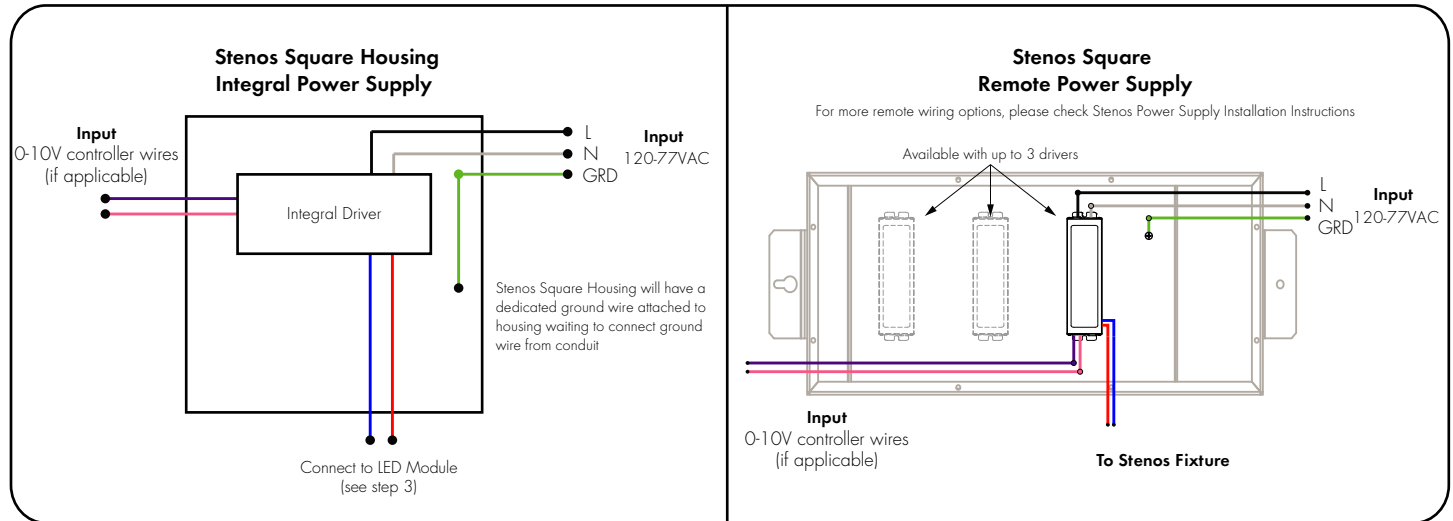

Low Voltage Wiring and LED Module Install 4x4 & 6x6

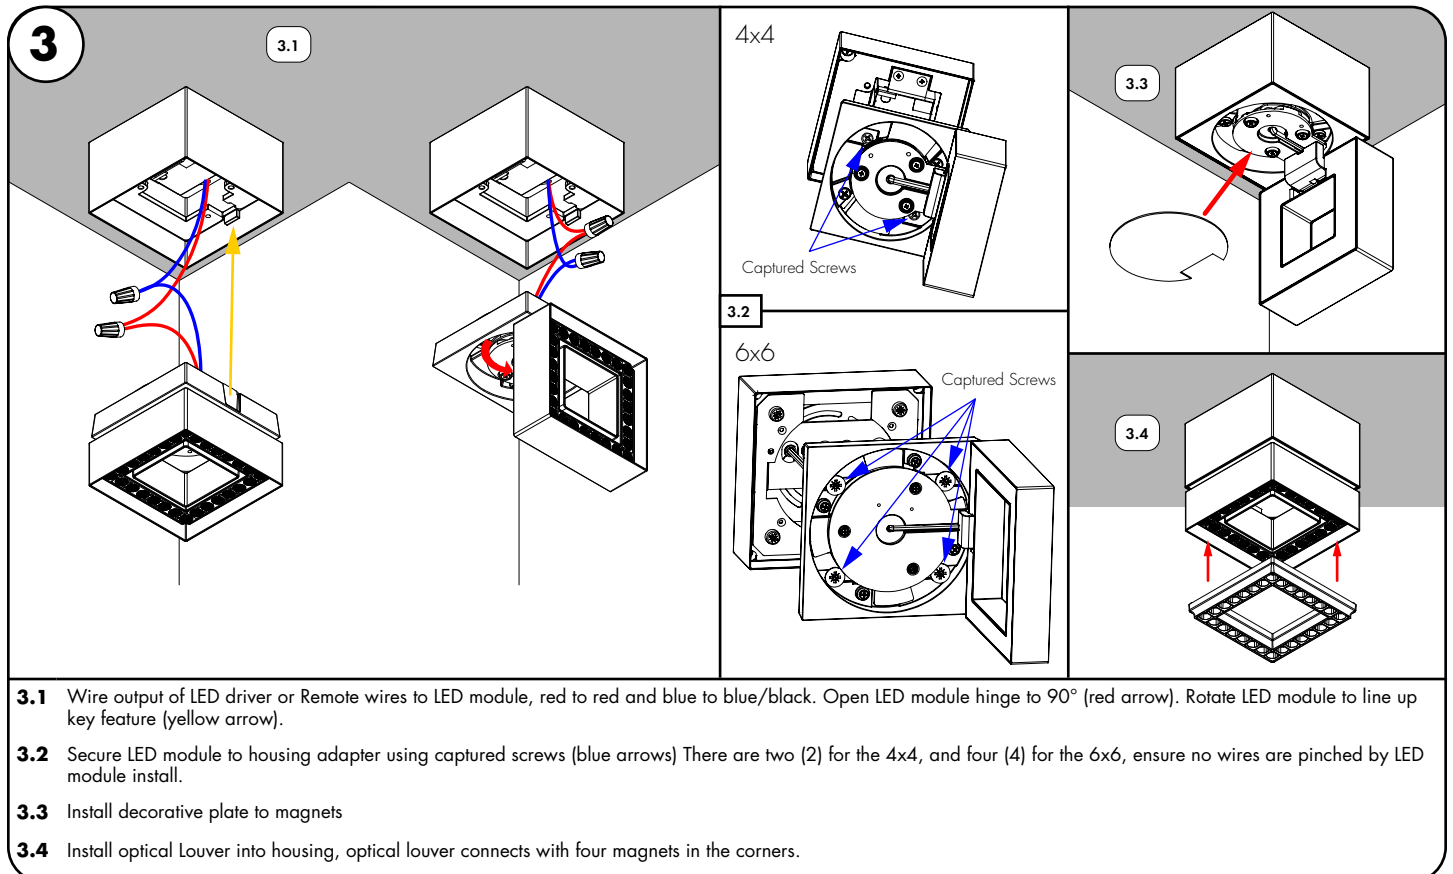

Stenos Square Downlight Installation Instructions

Stenos Square Adjustable Surface Downlights

Please read all instructions prior to installation and keep for future reference!

1. PRODUCT TO BE INSTALLED BY A QUALIFIED ELECTRICIAN
2. SUITABLE FOR DAMP LOCATIONS
3. FOR REMOTE DRIVER FIXTURES, USE ONLY WITH CLASS 2 POWER UNIT




REVO.1
10232025

5 / 6


STENOS[®]
by luminii

7777 Merrimac Ave
Niles, IL 60714
T 224.333.6033
F 224.757.7557
info@luminii.com
www.luminii.com

Swapping Optical Louver

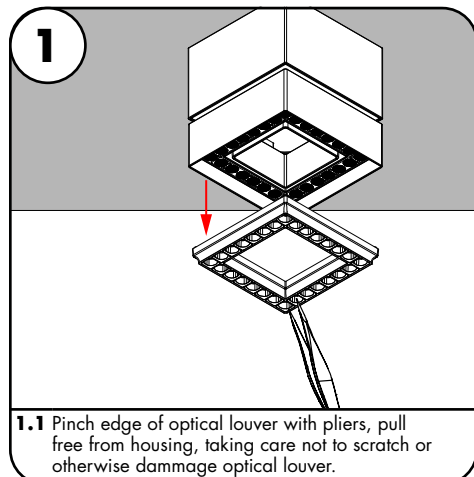

Driver Service (4x4)

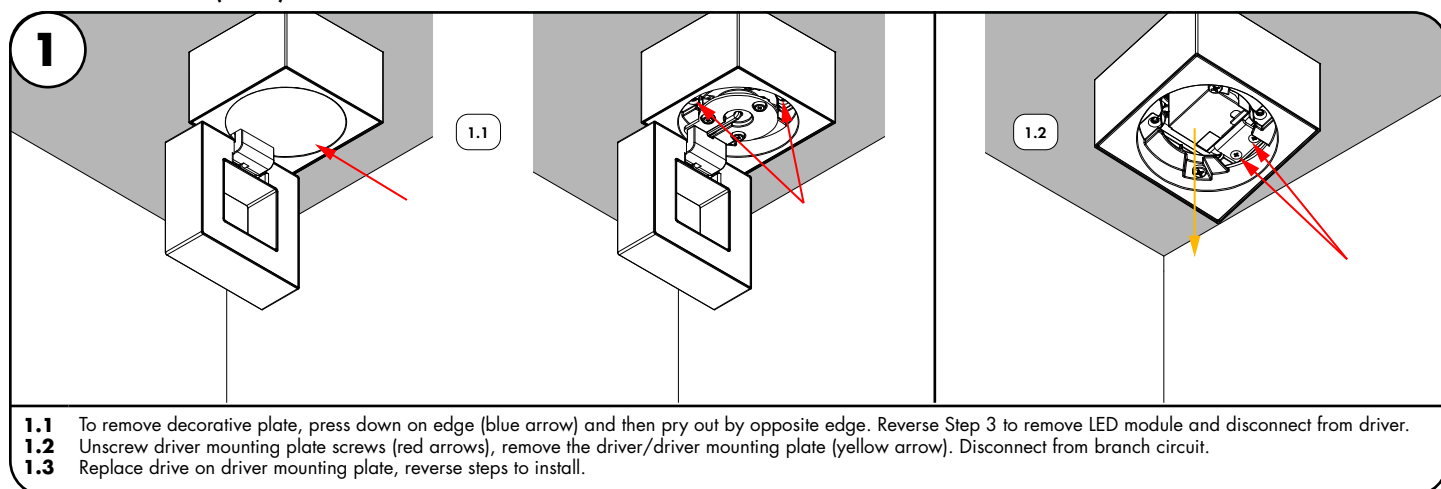

Stenos Square Downlight Installation Instructions

Stenos Square Adjustable Surface Downlights

Please read all instructions prior to installation and keep for future reference!

1. PRODUCT TO BE INSTALLED BY A QUALIFIED ELECTRICIAN
2. SUITABLE FOR DAMP LOCATIONS
3. FOR REMOTE DRIVER FIXTURES, USE ONLY WITH CLASS 2 POWER UNIT



REVO.1
10232025


6 / 6

STENOS[®]
by luminii


7777 Merrimac Ave
Niles, IL 60714
T 224.333.6033
F 224.757.7557
info@luminii.com
www.luminii.com

Driver Service (6x6)


1

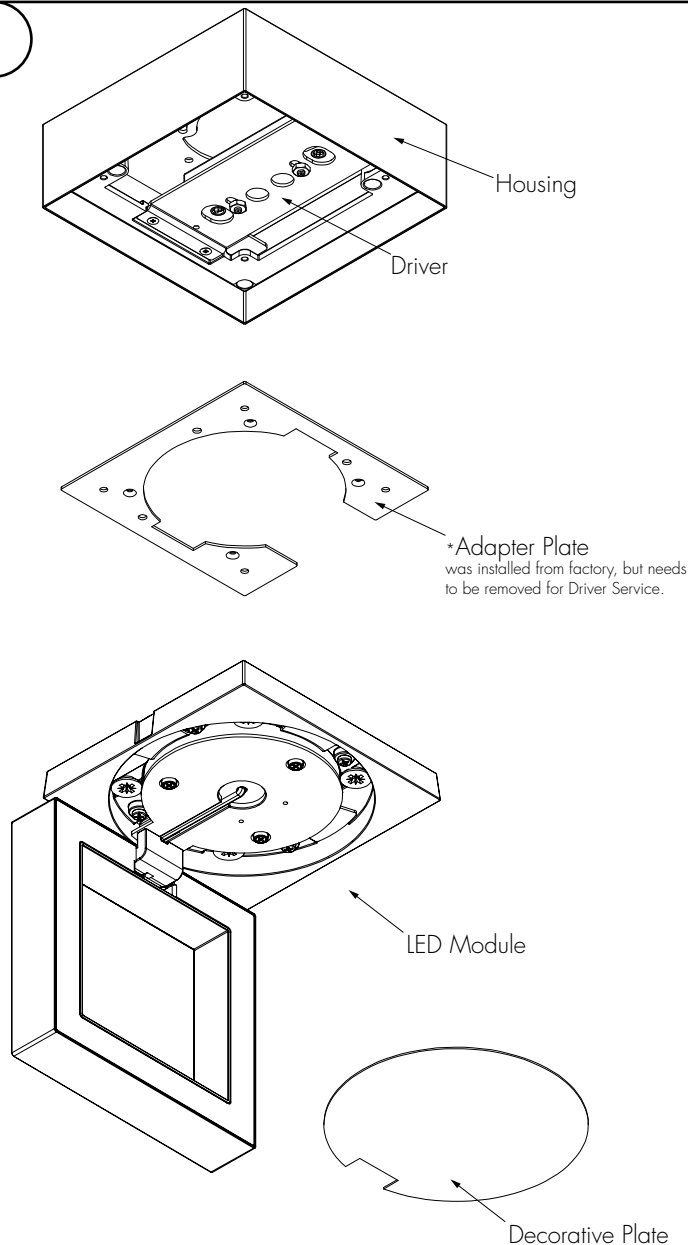


1.1

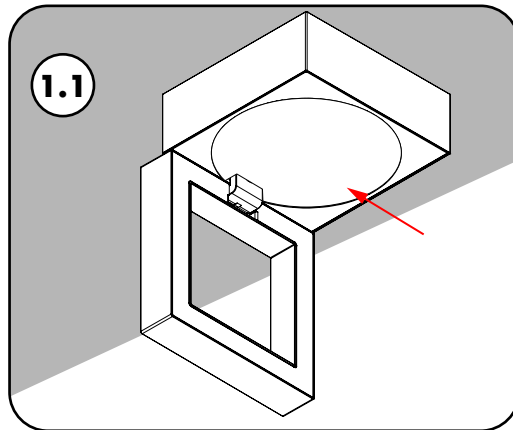

1.2

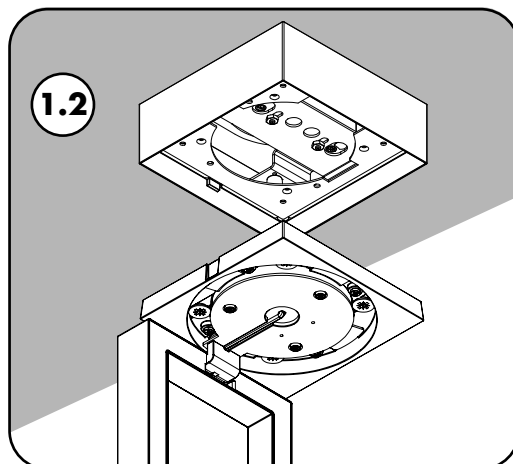

1.3

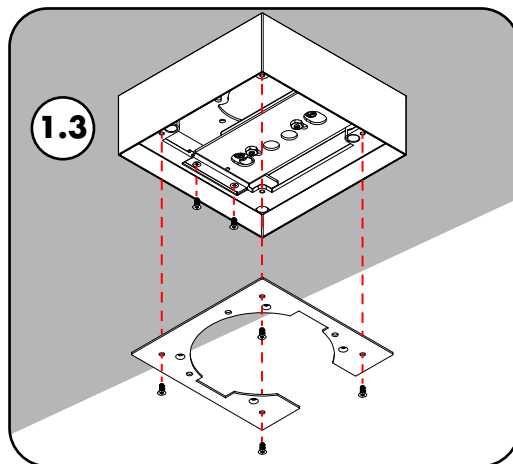

- 1.1 Press down on edge of decorative plate, pry it out by the opposite edge
- 1.2 Reverse "Wiring Step 3" to remove LED module.
- 1.3 Remove adapter plate by unscrewing the 4 screws, taking note of orientation. Unscrew driver mounting plate screws (4X), remove the driver/driver mounting plate. Disconnect from branch circuit.
- 1.4 Replace driver on driver mounting plate, reverse steps to install.