

Stenos Square Downlight Installation Instructions

Stenos Square Surface Downlights

Please read all instructions prior to installation and keep for future reference!

1. PRODUCT TO BE INSTALLED BY A QUALIFIED ELECTRICIAN
2. SUITABLE FOR DAMP LOCATION
3. FOR REMOTE DRIVER FIXTURES, USE ONLY WITH CLASS 2 POWER UNIT




REVO.1
10232025


1 / 5

STENOS[®]
by luminii

7777 Merrimac Ave
Niles, IL 60714
T 224.333.6033
F 224.757.7557
info@luminii.com
www.luminii.com

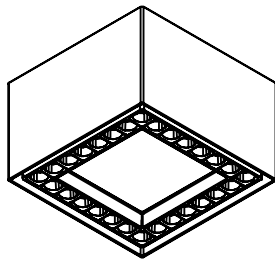

4X4

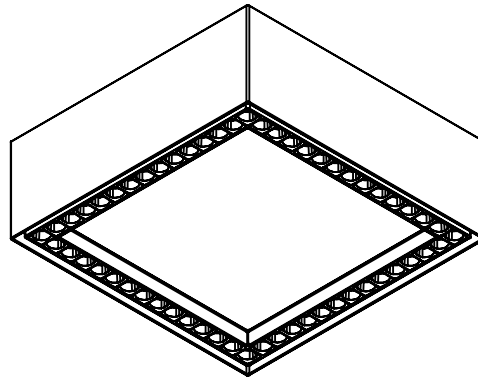

6X6

Stenos Square Downlight Installation Instructions

Stenos Square Surface Downlights

Please read all instructions prior to installation and keep for future reference!

1. PRODUCT TO BE INSTALLED BY A QUALIFIED ELECTRICIAN
2. SUITABLE FOR DAMP LOCATION
3. FOR REMOTE DRIVER FIXTURES, USE ONLY WITH CLASS 2 POWER UNIT




REVO.1
10232025

2 / 5

STENOS[®]
by luminii

7777 Merrimac Ave
Niles, IL 60714
T 224.333.6033
F 224.757.7557
info@luminii.com
www.luminii.com

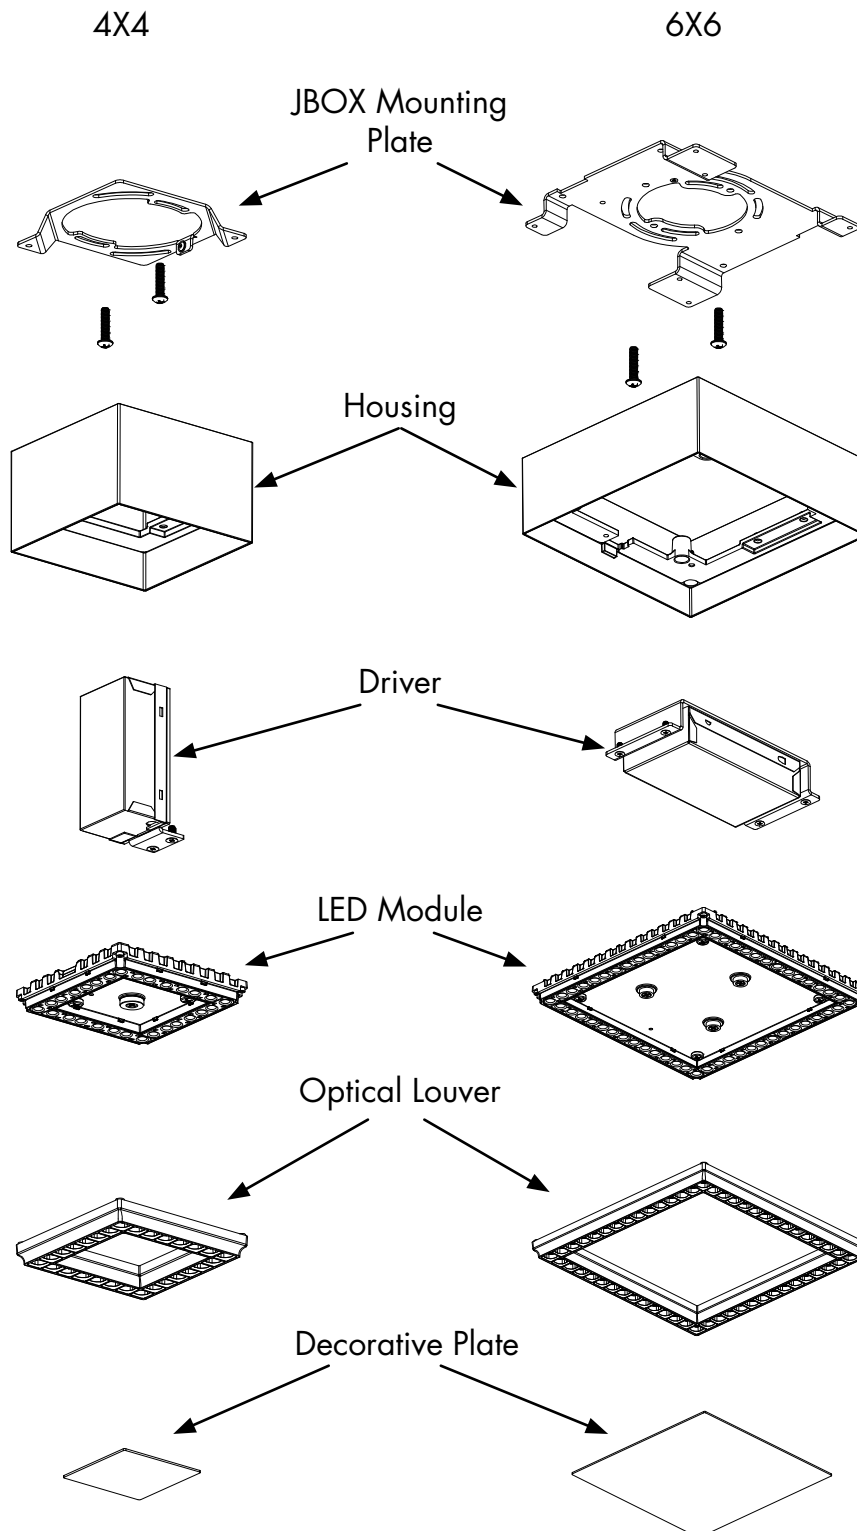

Note: The following install steps will display the 4" version, but 6" version share the same steps.

Stenos Square Downlight Installation Instructions

Stenos Square Surface Downlights

Please read all instructions prior to installation and keep for future reference!

1. PRODUCT TO BE INSTALLED BY A QUALIFIED ELECTRICIAN
2. SUITABLE FOR DAMP LOCATION
3. FOR REMOTE DRIVER FIXTURES, USE ONLY WITH CLASS 2 POWER UNIT




REVO.1
10232025

3 / 5


STENOS
by luminii

7777 Merrimac Ave
Niles, IL 60714
T 224.333.6033
F 224.757.7557
info@luminii.com
www.luminii.com


4x4 Driver Integral Clearance

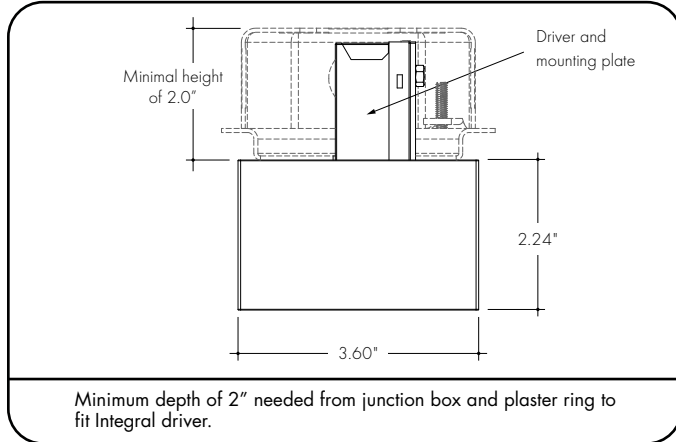

Mounting Bracket Dimensions

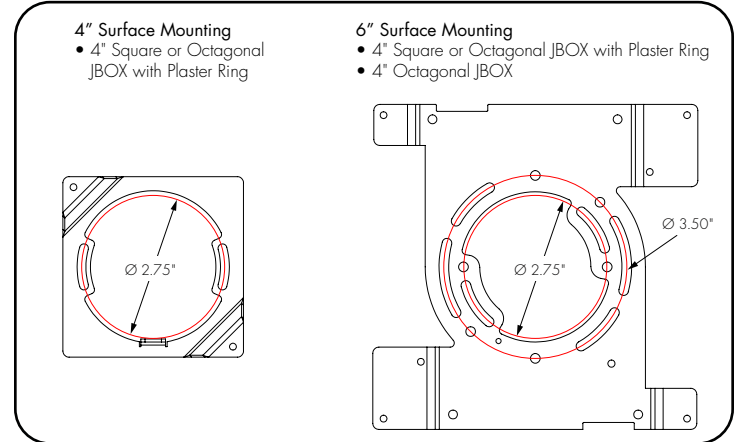

Housing Installation

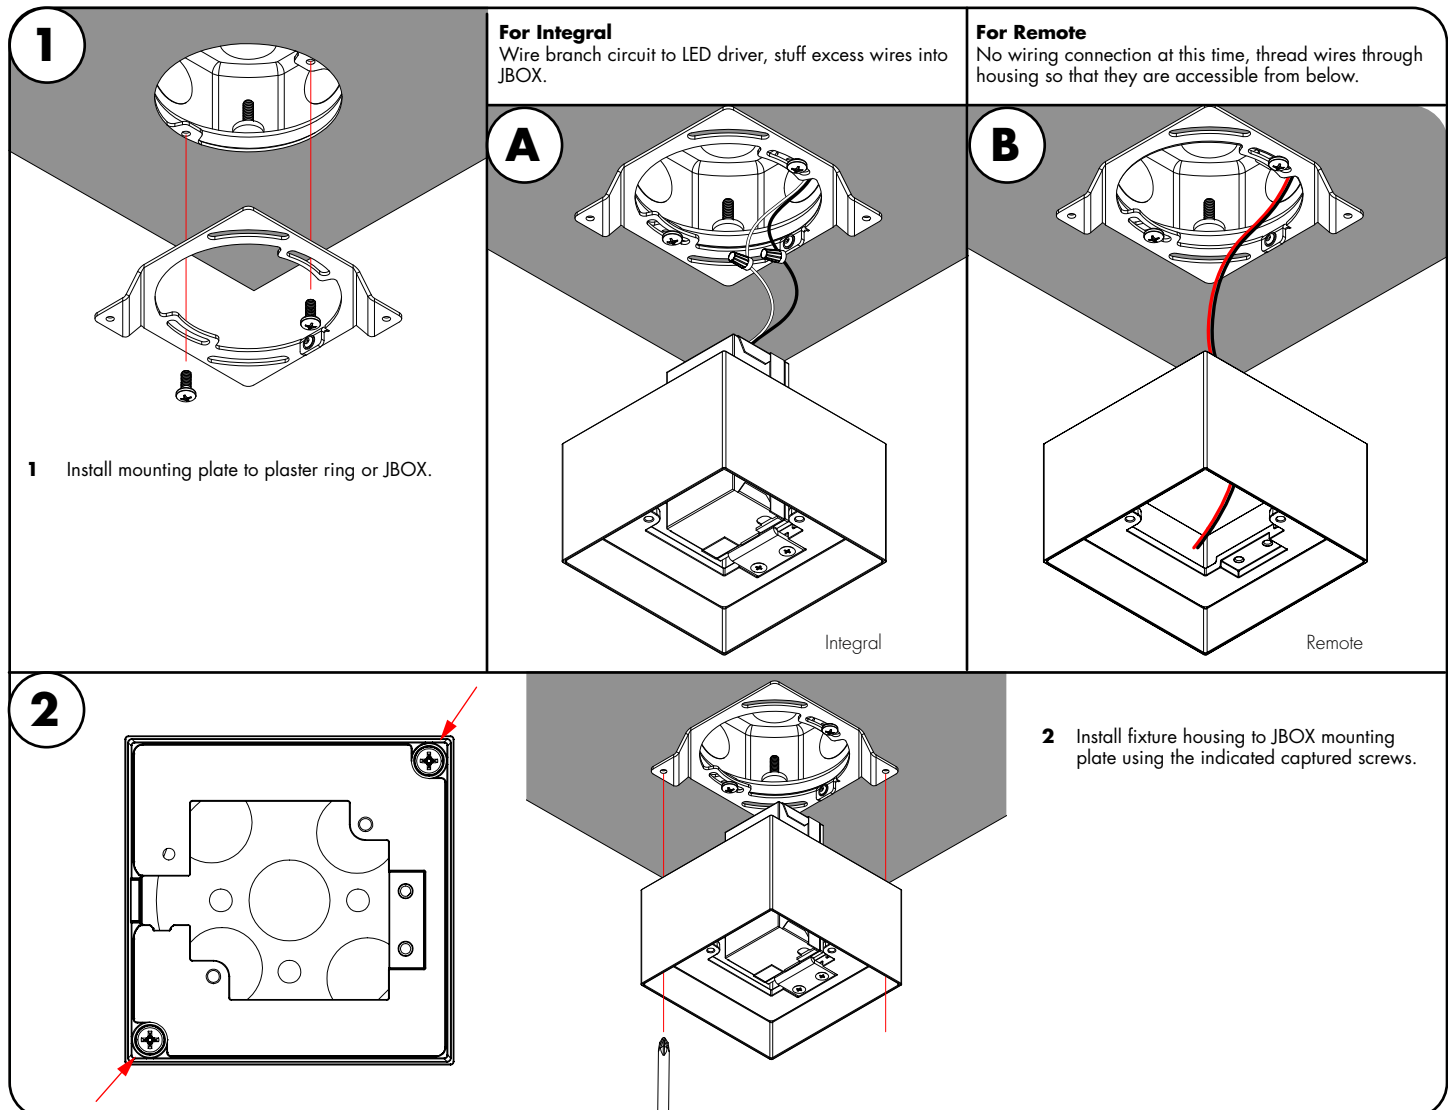

Stenos Square Downlight Installation Instructions

Stenos Square Surface Downlights

Please read all instructions prior to installation and keep for future reference!

1. PRODUCT TO BE INSTALLED BY A QUALIFIED ELECTRICIAN
2. SUITABLE FOR DAMP LOCATION
3. FOR REMOTE DRIVER FIXTURES, USE ONLY WITH CLASS 2 POWER UNIT




REVO.1
10232025

4 / 5


STENOS
by luminii

7777 Merrimac Ave
Niles, IL 60714
T 224.333.6033
F 224.757.7557
info@luminii.com
www.luminii.com

Wiring Diagrams

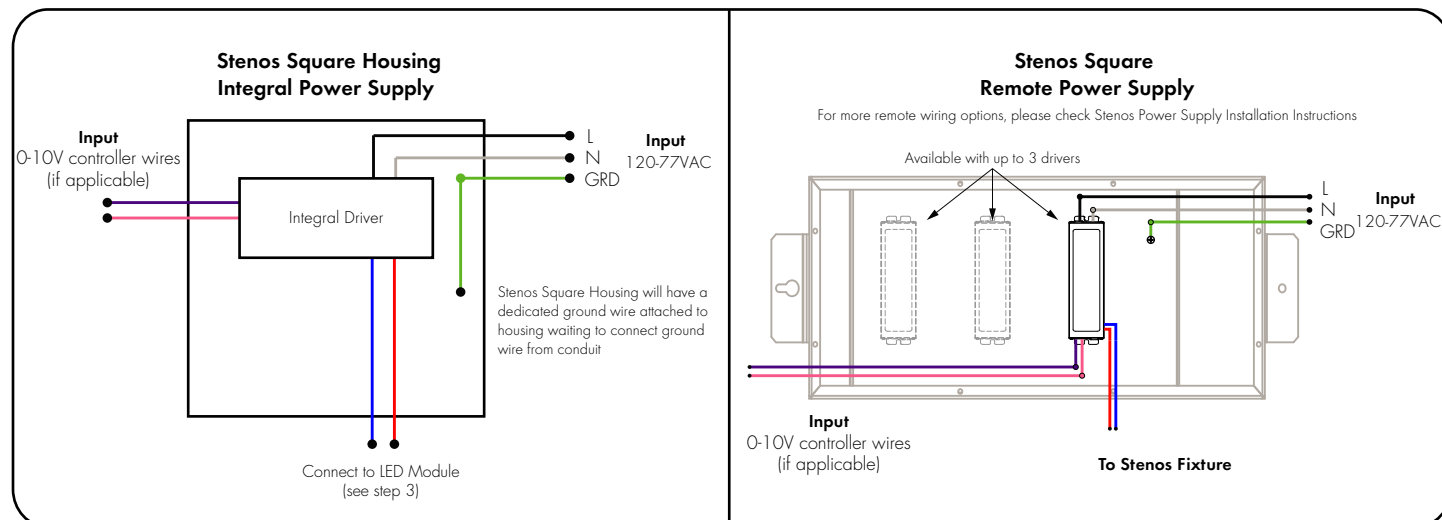

Low voltage wiring and LED module install

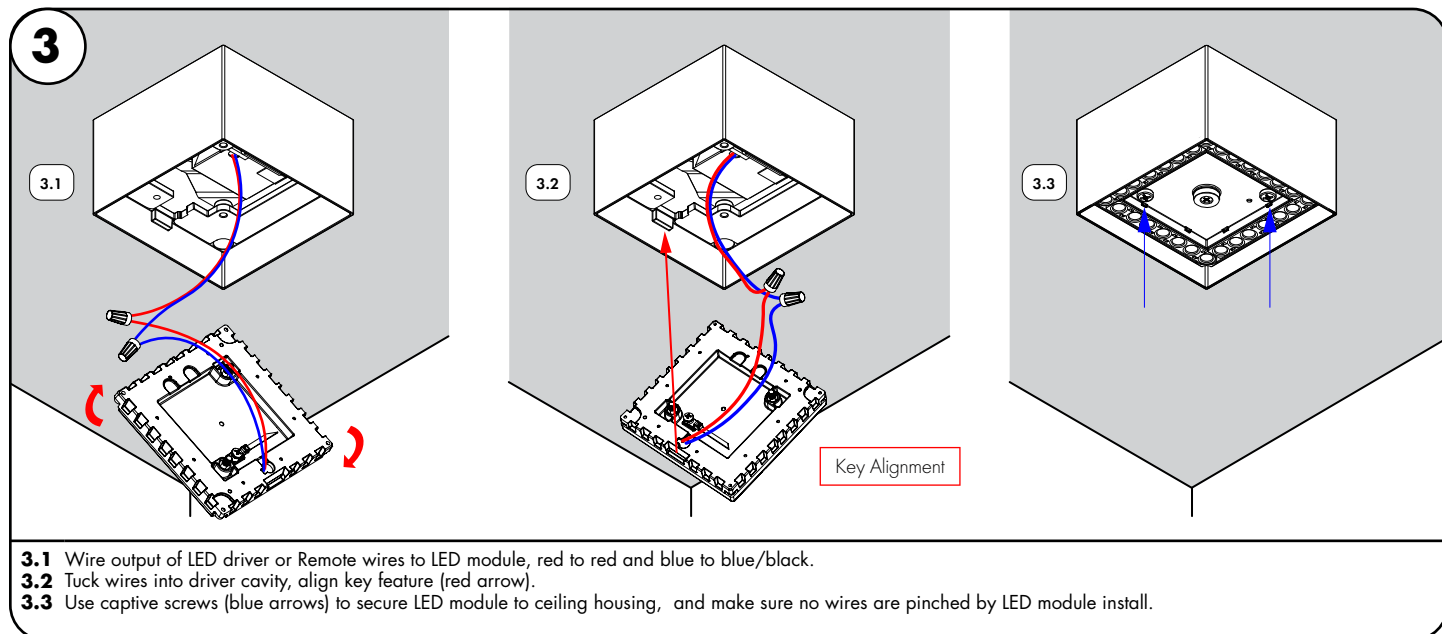

Stenos Square Downlight Installation Instructions

Stenos Square Surface Downlights

Please read all instructions prior to installation and keep for future reference!

1. PRODUCT TO BE INSTALLED BY A QUALIFIED ELECTRICIAN
2. SUITABLE FOR DAMP LOCATION
3. FOR REMOTE DRIVER FIXTURES, USE ONLY WITH CLASS 2 POWER UNIT



REVO.1
10232025

5 / 5

STENOS®
by luminii

7777 Merrimac Ave
Niles, IL 60714
T 224.333.6033
F 224.757.7557
info@luminii.com
www.luminii.com

Install Optical Louver and Decorative Plate

4

4.1 Install optical louver into ceiling housing, optical louver connects with magnets in the four corners.
4.2 Install the decorative plate to the magnet in the center of the LED module.

Swapping Optical Louvers

1

1.1 Press down on corner of decorative plate to pop opposite corner out, then pry plate out.
1.2 Use fingers to grip two inner edges of optical louver, pull free of magnets.
1.3 Replace new optical louver and then decorative plate.

Driver Service

1

1.1 Remove the decorative plate and optical louver (directions above).
1.2 Remove the LED module using the corner screws (indicated by orange arrows), disconnect wires to driver.
1.3 Unscrews driver mounting plate screws, remove driver and plate assembly, disconnect from branch circuit. Replace driver, reverse steps to re-install.