



We have our video install guides on our website and on youtube.com. Also feel free to call or email us if you have any questions  
1-855-457-5683  
information@lovethedrive.com

# BMW 3 Series (E36) 1993 to 1999 Love The Drive Wind Deflector Install Guide

Start by putting your top down and leaving your lid up. Make sure the black hooks are facing up.




Pull out the wire bracket from the closed position.



From one side of your car, lower the wind deflector into the back seat area of your convertible.

Align the black hooks, at the rear of the wind deflector so that they hook onto the quarter trim panel, the area covered by the top lid.

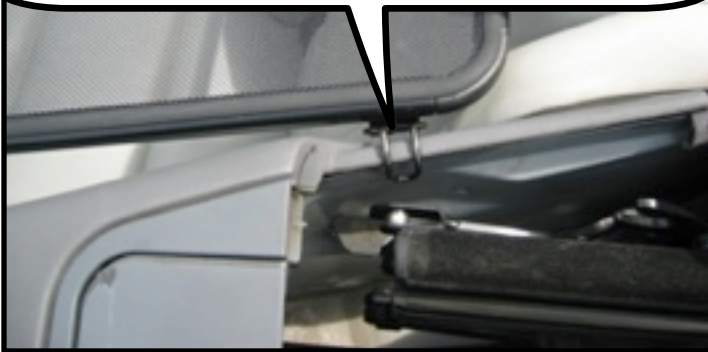

Making sure that both of the black hooks are attached to the trim panel, close the top cover lid to hold the black hooks in place.



Once the wire hook is pulled out, it will rest on the trim panel.



Pull the wire bracket back and lower it so it will line up with the hole in the trim panel.



Release the wire bracket so it enters the hole. Now repeat on the other side and you are now ready to **Love The Drive!**



**If you have any questions or comments please  
call 1-855-457-5683 or email [information@lovethedrive.com](mailto:information@lovethedrive.com)**