



We have our video install guides on our website and on youtube.com. Also feel free to call or email us if you have any questions
1-855-457-5683
information@lovethedrive.com

BMW 3 Series (E30)

318, 320, 325, M3

1987 to 1992

Love The Drive Wind Deflector Install Guide

Start by putting your top down and leaving your lid up. Pull out the wire brackets from the closed position on both ends of the wind deflector.



Place the wind deflector into the back seat of your convertible.



Place the rear bracket behind the dip in the trim panel. Then repeat on the other side.



Close the top cover lid to hold the black hooks in place.




The wire hook, when pulled out, will rest on the trim panel just above the seat belt near the front seats.



Pull the wire bracket back and forward, then lower it to line up with the space beside the seat belt.



Direct the wire bracket into the space behind the seat belt.

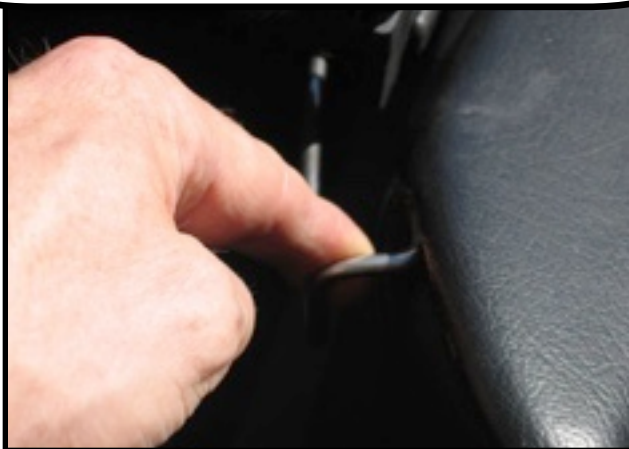

Repeat on the other side and you are ready to **Love The Drive**.



If you have any questions or comments please
call 1-855-457-5683 or email information@lovethedrive.com
www.lovethedrive.com