





We have our video install guides on our website and on youtube.com. Also feel free to call or email us if you have any questions
1-855-457-5683
information@lovethedrive.com

Mustang with Lightbar 1994 to 2004 Love The Drive Wind Deflector Install Guide

Step 1: When your wind deflector was shipped to you the front brackets needed to be rotated inwards so it would fit into the box. You will need to remove the four screws and turn the bracket so that it faces forward then replace the screws and attach the felt cover.

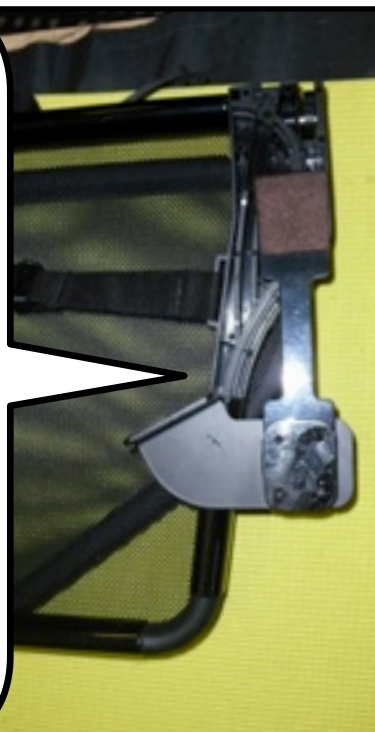

The bracket will extend past the wind deflector as shown in the photo. The brackets will face out and back.

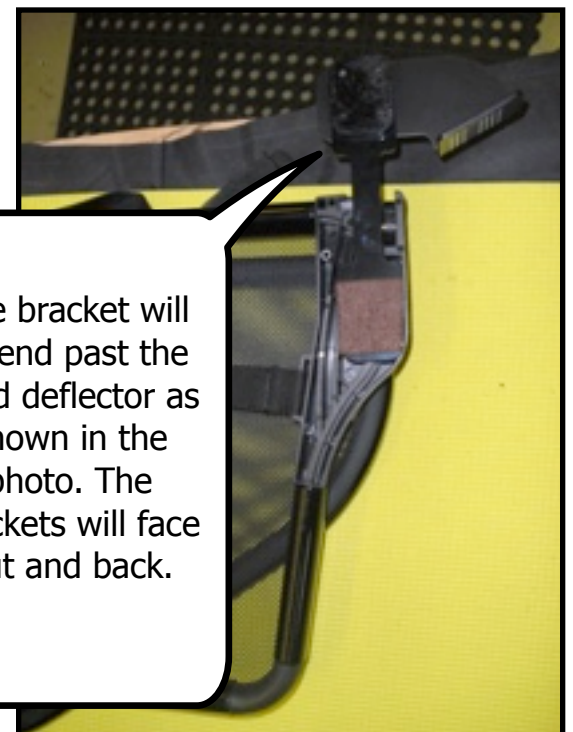



Place the folded wind deflector into the back seat area. For the first few times you install the wind deflector, it helps to have someone help hold one end while you adjust the seat belt straps over the brackets.

Step 2: You are now ready to install your wind deflector. With the top down, start by placing your hand underneath the front seatbelt strap.



Step 2 Cont: Pull the seat belt strap up to show the hole where the front bracket will sit.



Step 3: Lower the front bracket on one side into the hole and release the seat belt strap. Repeat these steps on the other side.



Step 3 Cont: It is very important that the bracket sits UNDER the seat belt strap. As shown in the photo below.




IMPORTANT: NEVER ALLOW THE BRACKET TO SIT ON TOP OF THE SEAT BELT AS SHOWN HERE.



Step 4: The straps come down from the wind deflector and attach to the bottom of the trim panel.



Step 4 Cont: The front silver hooks attach to the bottom of the trim panel behind the seat belt retractor on the floor. The other end clips into the strap above, near the front bracket.

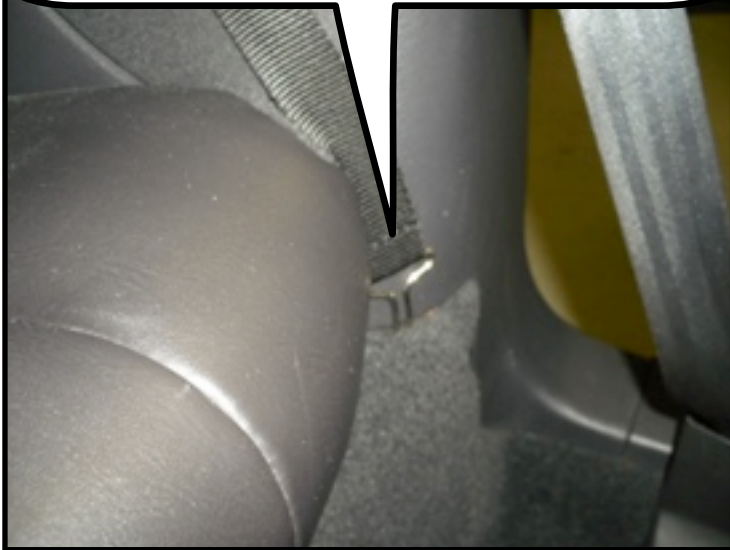

You can now lift the top panel up and you are ready to go!



You are now ready to...

LOVE THE DRIVE



.com



**If you have any questions or comments please
call 1-855-457-5683 or email information@lovethedrive.com
www.lovethedrive.com**