


We have our video install guides on our website and on youtube.com Also feel free to call or email us if you have any questions
1-855-457-5683
information@lovethedrive.com

Spyder 2006 to 2012

Wind Deflector Install Guide

Your wind deflector will cover the rear seat area. Start by folding your front seats forward. Your wind deflector can be left in place with the top up or down

The wind deflector attaches to your Spyder using four holes in the trim panel. Two holes beside the front seatbelt straps and two holes on each side on the rear seat.

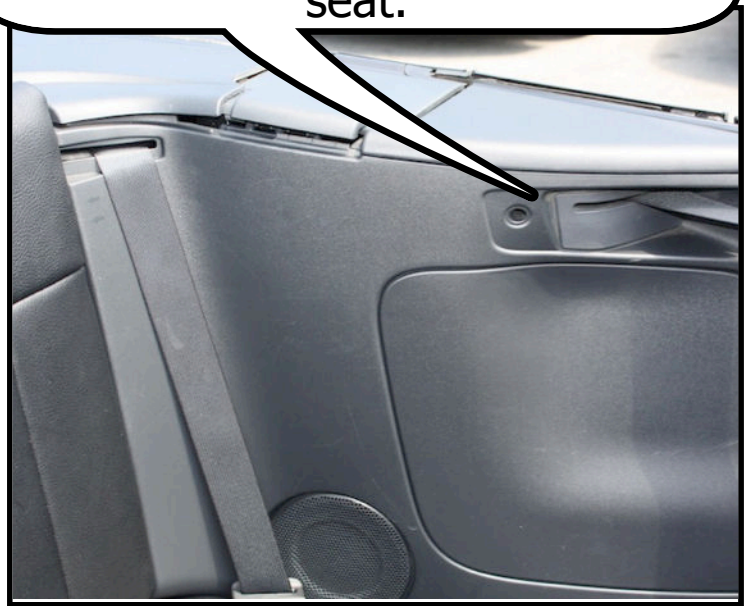

You can find the rear holes by pulling your rear seat to one side to show the holes, they are just below the height of the rear seat belts



Line up the rear brackets with the bracket holes and then slide the brackets back into the holes



Hold the wind deflector with one hand and lower it so it is even with the rear trim panel



With the handle facing towards the front of the car slide the bolt out and into the hole in the side trim panel.



Turn the handle down so it faces the floor, this will lock the bolt into place. Repeat on other side



Your wind deflector stores in the truck when not in use.

