



We have our video install guides on our website and on youtube.com also feel free to call or email us if you have any questions 604-628-7529 info@lovethedrive.com

Solara 2005 to 2010 Install Guide

START BY PUTTING YOUR TOP DOWN. HAVE A FRIEND HELP YOU INSTALL THE WIND DEFLECTOR THE FIRST FEW TIMES. AFTER THAT YOU WILL BE ABLE TO EASILY INSTALL AND REMOVE YOUR WIND DEFLECTOR BY YOURSELF IN MINUTES.


YOUR LOVE THE DRIVE WIND DEFLECTOR COVERS THE BACK SEAT AREA OF YOUR SOLARA



ONCE IN PLACE YOUR WIND DEFLECTOR IS HELD IN PLACE BY TWO SPRING PLUNGERS IN THE BACK AND TWO BRACKETS IN THE FRONT. THERE ARE ALSO TWO DOWN STRAPS (NOT SHOWN)



STEP 1: YOUR LOVE THE DRIVE WIND DEFLECTOR ATTACHES TO THE SMALL HOLES IN THE TRIM PANEL. YOUR WIND DEFLECTOR HAS TWO "L" HANDLE SPRING PLUNGERS. THE "NOSE" OF THE PLUNGERS WILL GO INTO HOLES. START WITH THE PLUNGERS IN THE CLOSED POSITION, AS IN THE SECOND PICTURE.

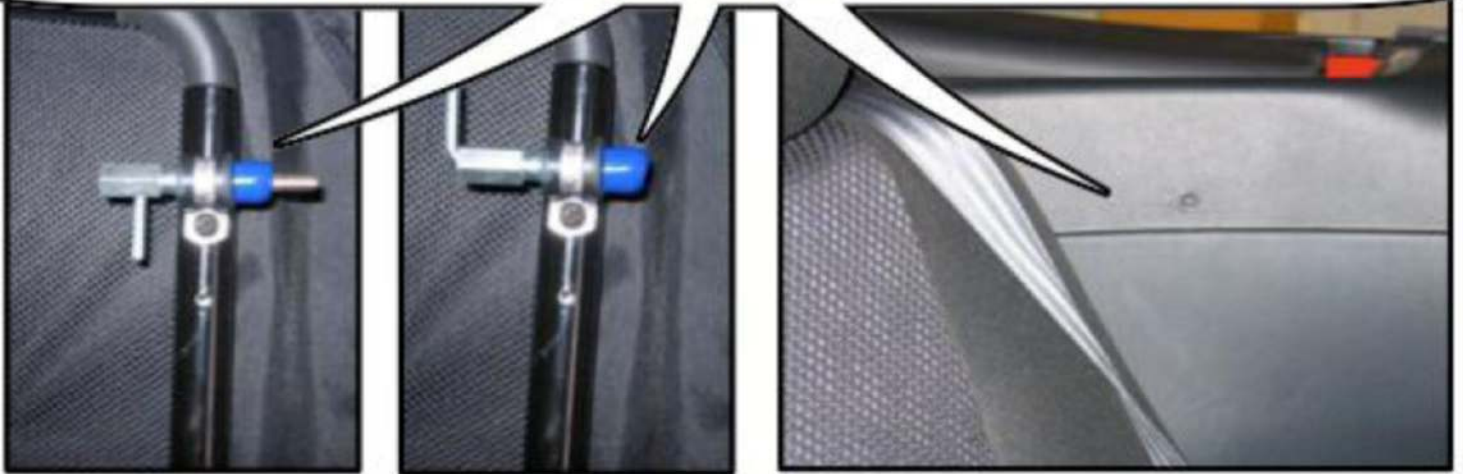

STEP 2: LOWER YOUR WIND DEFLECTOR INTO BACK SEAT AREA. YOU WILL NEED TO CONTINUE TO HOLD THE BACK OF THE WIND DEFLECTOR



STEP 3: LOWER YOUR WIND DEFLECTOR SO THE "NOSE" OF THE PLUNGER IS IN LINE WITH THE HOLE IN THE TRIM PANEL



STEP 3 CONT: TURN THE HANDLE TO RELEASE PLUNGER. THE NOSE WILL ENTER THE HOLE AND HOLD YOUR WIND DEFLECTOR IN PLACE. REPEAT ON OTHER SIDE.



STEP 4: YOUR FRONT BRACKETS WILL REST ON THE TOP OF THE TRIM PANEL



STEP 5: THERE ARE TWO FRONT STRAPS. THESE STRAPS ATTACH TO THE BOTTOM OF THE TRIM PANEL (BELOW THE BACK SEAT) AND THEN TO THE BUCKLE UNDER THE FRONT BRACKETS. REPEAT ON THE OTHER SIDE.