



We have our video install guides on our website and on youtube.com also feel free to call or email us if you have any questions 1-855-457-5683 information@lovethedrive.com

Miata 1989 to 2005

Love The Drive Wind Deflector

Install Guide


Start by lowering your top. To install your wind deflector you will need to remove two plastic covers and replace them with two screws which have been provided.



To remove the plastic piece, use a thin, flat screw driver and gently lift at the edge and pull out.




Next you will need to attach the tube brackets to your Miata. The photo below shows the tube bracket, silver screw which will replace the plastic piece that you just removed and the black screw was already in place in your car.

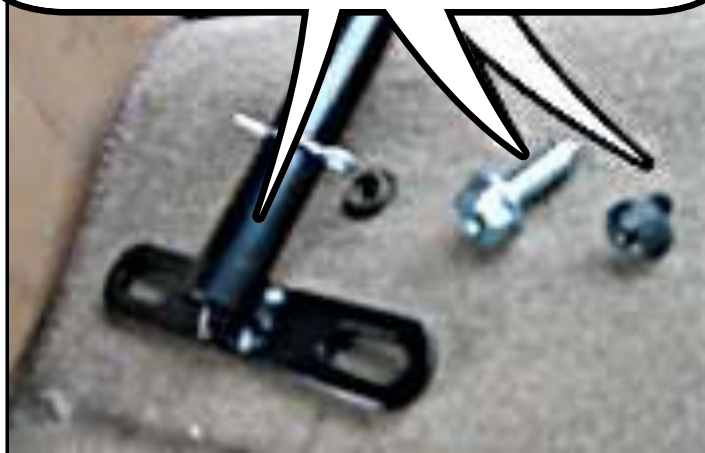

The tube bracket is attached to the inside of your car using the silver screw which goes into the top hole where you removed the plastic cover. And the bottom screw which was already in place. You will only have to do this the first time you install the wind deflector. You don't have to remove this bracket.



The shaft bracket which is attached to the wind deflector then slides into the tube bracket that you just mounted, on both sides of your car.

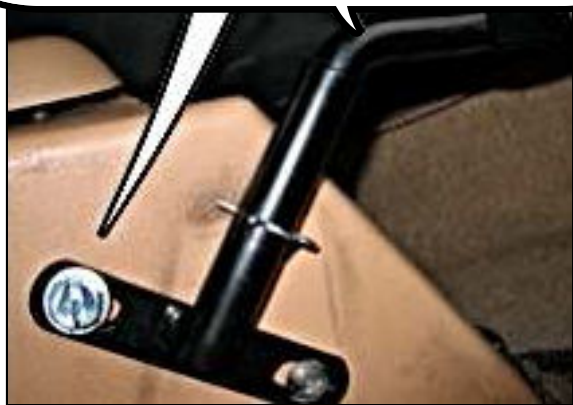

Please note that the tube brackets point toward the back of your Miata. The wind deflector is supported by the shaft bracket and sits behind the tube brackets.



The last step is to attach the two elastic straps with the snaps on them, to the floor of the back seat.



If your car does not have the snaps, attach the straps with the velcro backing and attach them to the carpet.

