



We have our video install guides on our website and on youtube.com Also feel free to call or email us if you have any questions 1-855-457-5683 information@lovethedrive.com

# Mercedes CLK 2004 to 2009 Wind Deflector Install Guide Design by Love The Drive

- \* You can raise and lower your convertible top with the wind deflector installed.
- \* The wind deflector will fit in the trunk when not in use.

Start by lowering your top and titling the front seats forward.

Your Mercedes convertible is designed to fit a wind deflector. There are two holes in the trim panels in the rear seat area.



The rear brackets slide into the slots where the rear seat belts come out from the rear seats.




Start by lowering the wind deflector into the rear seat area. Slide the rear brackets into the rear seat belt slots. Then slide the front bolts into the holes in the trim panels. Turn the handles down to lock the wind deflector in place.



Your wind deflector has bolts in the front that slide into the holes in each trim panel.



Turn the bolt handle down to lock it in place. Turn the handle towards the front to slide the bolt into and out of the hole.

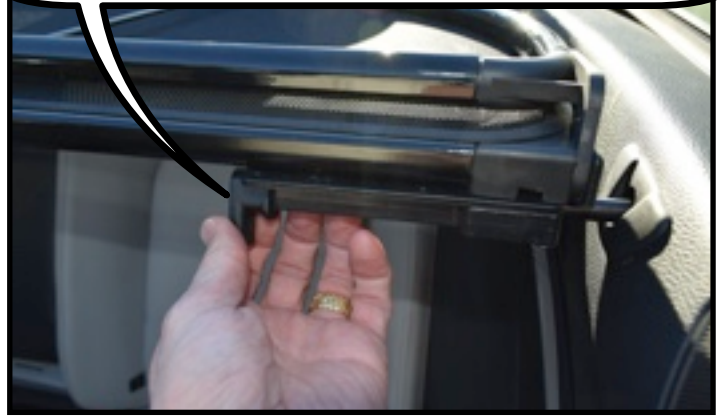

Insert the rear brackets into the rear seat belt slots.



Your wind deflector will fit in your trunk. It also comes with a free storage bag. This is to be used when you need to put the wind deflector in the trunk, once you rotate one of the rear brackets.



Once you rotate **ONE** of the rear brackets, loosen and remove the two thumbscrews. Rotate the rear bracket 180%, then replace and tighten the thumbscrews.



Start by inserting the end of the wind deflector with the rear bracket that has been



On the driver side raise the wind deflector so that it is close to the front of the trunk and lower the wind deflector into the trunk.

