



We have our install videos on our website and on YouTube. Also feel free to call or email us if you have any questions 1-855-457-5683 information@lovethedrive.com

Mercedes C-Class 2016 to 2022 C 300, C 400, C 63 AMG Wind Deflector Install Guide Design by Love The Drive

- * You can raise and lower your convertible top with the wind deflector installed.
- * Your wind deflector will fit in the trunk when the top is up.

Start by lowering your top and tilting the front seats forward.

Your wind deflector fits in the backseat of your Mercedes. It attaches to your Mercedes using 4 brackets and 2 straps. There is two front brackets and two brackets in the rear.



The Rear brackets slide into the slot on in the rear seat. This Slot is located where the rear seat folds down to allow access to the Trunk. Below the rear head rests



Start by turning both rear brackets out and tighten the thumb screw.



Next lower the wind deflector in the rear seat area. Slide the rear brackets into the slot in the rear seat.



The Front brackets sit on the rear trim panels. The brackets are coated in Plastisol. Which is a soft Vinyl that will not mark the trim panel



Next attach the two straps that hold the wind deflector in place. These straps attach to the anchor system in the rear seats.




Look for the tabs that has an image of a baby seat and say "ISOFIX". The snap hooks attach to the anchor system behind this Tab



Slide the black hook facing down into the slot. Then pull back on the strap. The hook will lock into place. Then attach the strap to the bottom of the wind deflector and pull the strap so it is Tight.



Your wind deflector will fit in your trunk when the top is up. If the Top is Down and you need to use the back seat you will need to put the wind deflector in the storage bag.

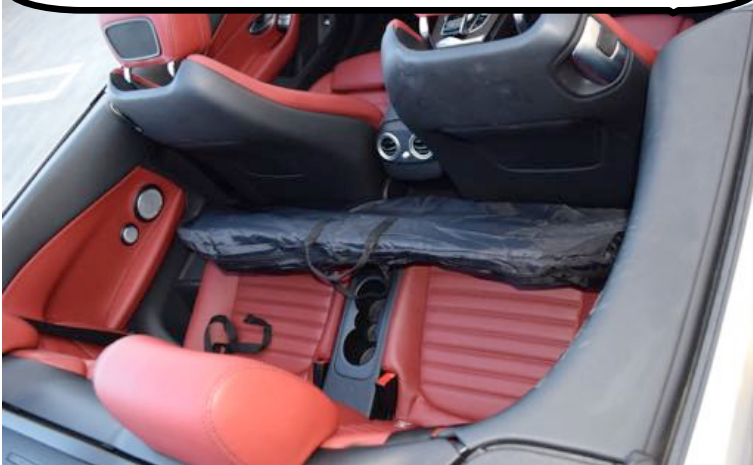

The other option is to lower your rear seats and the wind deflector be stored in the space between the trunk and the rear seat.

