



We have our video install guides on our website and on youtube.com Also feel free to call or email us if you have any questions
1-855-457-5683
information@lovethedrive.com

Wind Deflector Install Guide for Mustang with CDC Lightbar installed Fitting 2024 to 2030

This wind deflector is designed to fit in a 2024 to 2030 Mustang convertible with a Lightbar install (From CDC or Saleen). No modifications to your convertible are needed. The wind deflector is designed to go in and out of your convertible in under 30 seconds. The wind deflector can stay in your convertible with the top up or down.

Start by lowering your top. Then lower the wind deflector into the rear seat area.



The front brackets sit on the side trim panel close to your light bar. All the brackets are coated in a soft vinyl so it will not mark your Mustang



The rear brackets sit on the trim panel in the back seat. The brackets are designed to be used with your boot cover



The Wind Deflector is designed to sit under your Lightbar. The wind deflector should not touch your Lightbar. It will be 1/4 inch away.



There are 4 straps that hold your wind deflector down. Two use the child anchor system and two attach to the bottom of the trim panel



The black snap hook straps will lock into the Child Anchor system. The anchors are located the 4 holes in the rear seats. Then buckle the strap into the wind deflector




The silver hook straps hook into the cutout on the bottom of the trim panel and then buckle into the bottom of the wind deflector



You can adjust the height of your wind deflector. The wind deflector comes with spacers under the front brackets.



To lower the height of the wind deflector remove 1 or 2 spacers on both sides. this will lower the wind deflector.

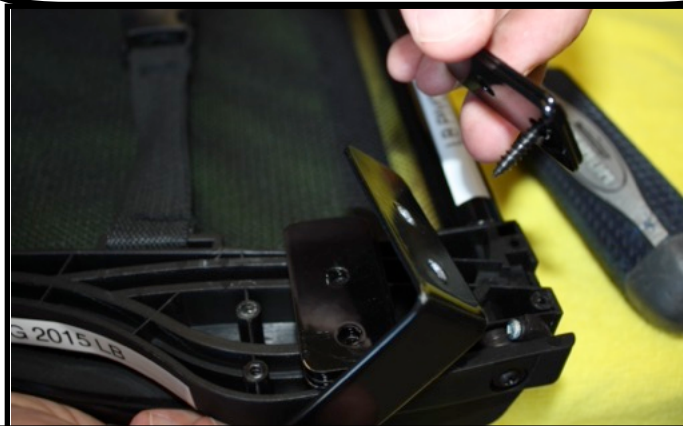

If you have any questions or comments please call 1-855-457-5683 or email information@lovethedrive.com or Visit www.lovethedrive.com