



We have an install video guide on our website. Also feel free to call or email us if you have any questions
1-855-457-5683
information@lovethedrive.com


BMW 4 Series from 2021 to 2026 Wind Deflector installation guide Designed by Love The Drive

You can raise and lower your convertible top with the wind deflector installed.

Your BMW 4 is designed for with a wind deflector. There are two holes on each side of the rear trim panel. The front and rear barrel bolts fit into these holes.



Start by extending the front and rear barrel bolts on one side of the wind deflector. Turn the handles so they will face down, this locks the bolts into place. These bolts will slide into the holes on the opposite side of the car from which you are standing.

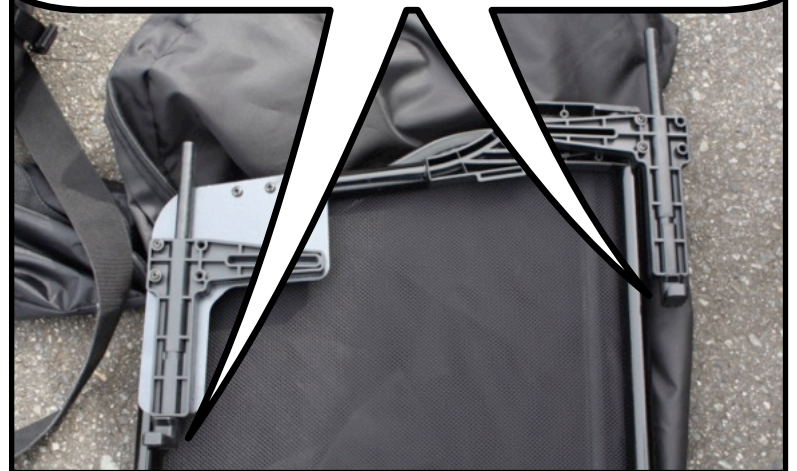

Next, lower the wind deflector into the back seat area and insert the front bolt into the hole into the trim panel opposite to the side you are standing and then insert the rear bolt into the rear hole.



Now lower the wind deflector into the back seat area so the front barrel bolt is in line with the front hole. Slide the bolt forward into the hole and turn the handle down to lock the bolt.



Next, reach back and slide the back bolt into the rear hole and turn the handle down to lock the barrel bolt



When you are finished please double check that all four handles are turned downwards so the barrel bolts are in the locked position.



Your wind deflector will fit in the trunk with your convertible top up or down. Your wind deflector comes with a storage bag included.



That is it. Now you are ready to drive your BMW in more comfort all year long. Please contact us if you have any questions

